MOTOMANUAL

W355
CDMA

motorola.com

HELLOMOTO

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola W355 wireless phone.

Menu Key
Opens a sub-menu when appears in the display, or selects a highlighted feature.

Left Soft Key
Performs functions in lower left display.

Message Key

Volume Controls

Send/Answer Key
Make & answer calls. Press in idle screen to see list of recently dialled calls.

Mini-USB Connector
Charge the battery

Earpiece
Listen to your voice calls & messages.

Right Soft Key
Performs functions in lower right display.

Clear Key

Power/End Key
Turn the phone on/off, end calls, exit menus.

Navigation Key
Scroll up, down, left or right.

Microphone

Note: The above illustration is for reference only. There may be slight differences between the appearances of handset, keys and contents of display used in this manual and those of your handset. Please refer to your handset for actuality.

check it out!

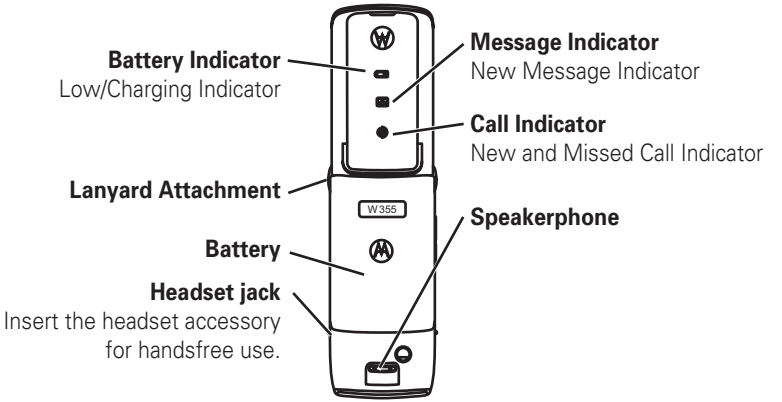

Note: The above illustration is for reference only. There may be slight differences between the appearances of handset, keys and contents of display used in this manual and those of your handset. Please refer to your handset for actuality.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

contents

check it out! **2**
Safety Information **7**
Use and Care **12**
Recycling Information . . **13**
essentials **14**
about this guide 14
RUIM card 15
battery 15
Battery tips 16
turn it on & off 17
make a call 18
answer a call 18
correcting entry errors . 18
main attractions **19**
zoom number display . 19
datebook 19
read messages with iMelody 24
iMelody downloadable ring tones via EMS . . . 24
FM radio 25
speakerphone 25
multi-letter phonebook search 26
basics **27**
display 27
status icons 29
menus 30
text entry 32
volume 34
navigation key 35
codes & passwords . . . 35
restrict calls 35
customize **36**
ring style 36
time & date 37
animation 37
wallpaper 37
screen saver 37
answer options 38
calls **39**
recent calls 39
redial 39
speed dialing 40
return a call 40
mute a call 40
caller ID 40
emergency calls 41
international calls 41
voicemail 42
special characters 42

other features 43
phonebook 43
recent calls 44
messages 45
settings. 47
more features. 51
game 52
SAR Data. 53
FCC Notice 54
WHO Information 55
index 56

Note: The function available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any questions about the handset function. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revision or changes.

menu map

main menu

Messages
- Create Message
- Voicemail
- Text Msgs
- Quick Notes
- Outbox
- Drafts

Phonebook
- [New Entry]

Recent Calls
- Missed Calls
- Received Calls
- Dialed Calls
- Call Timer

Games
- Football
- Crazy
- Rebels

MyMenu
- [New MyMenu]

UTK *

Datebook *

Settings
- Ring Styles
- Phone Status
- In-Call Setup
- Security
- Personalize
- Initial Setup
- Network
- Headset

More
- Calculator
- Stop Watch
- Lantern
- Datebook
- Alarm Clock
- Service Dial

***** Network Dependent

The function available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any questions about the handset function. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revision or changes.

The above gives an example of the typical structure of the main menu. Please refer to the handset for the actual structure.

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: `www.motorola.com`.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: `www.motorola.com/callsmart`.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage

Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Use and Care

To care for your Motorola phone, please keep it away from:

liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.

extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.

microwaves

Don't try to dry your phone in a microwave oven.

dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.

cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.

the ground

Don't drop your phone.

Caring for the Environment by Recycling

This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Telephone and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.

about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press MENU > **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you press MENU to open the menu, highlight and select **Recent Calls**, then highlight and select **Dialed Calls**.

Press NAV up or down to highlight a menu feature. Press **SELECT** to select the highlighted menu feature.

symbols	
	This means a feature is network/ subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

RUIM card

Your *Removable-User Identity Module* (RUIM) card contains personal information like your phone number and phonebook entries.

RUIM card installation

1

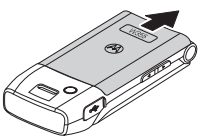

2

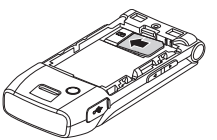

Caution: Do not bend or scratch your RUIM card. Avoid exposing your RUIM card to static electricity, water, or dirt.

battery

battery installation

1

2

3

4

battery charging

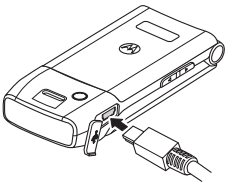

New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as shown in the battery installation and battery charging sections. Some batteries perform best after several full charge/discharge cycles.

When the battery charging is complete, the battery icon will change to a battery full icon (🔋) and the screen displays **Charging Complete**.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.

- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in the gray-edged pages at the back of this guide.

turn it on & off

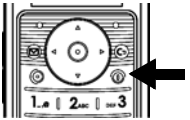

To turn your phone on, press and hold ⏻ for 2 seconds. If prompted, enter your 8-digit RUIM card PIN code and/or 4-digit unlock code.

Caution: If you enter an incorrect PIN code 3 times in a row, your RUIM card becomes disabled and your phone displays **RUIM Blocked**. Contact your service provider if your RUIM is blocked.

To turn your phone off, press and hold ⏻ for 2 seconds. If prompted, enter your 4-digit unlock code.

make a call

From the home screen, enter a phone number (up to 32 digits) and press ⦿.

To end a call, press ⏻.

answer a call

To answer an incoming call, press ⦿. Refer to "answer options" on page 38 for alternative methods to answer an incoming call.

To end the call, press ⏻.

If your phone has Caller ID, the caller's phone number will be displayed on the screen. If the caller's number is stored in the **Phonebook**, the caller's name will be displayed.

correcting entry errors

To correct a misdialed digit, press C to erase one digit at a time. To erase all digits at once, press and hold C for more than one second.

main attractions

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.

zoom number display

Zoom number display is a smart function that lets you see the enlarged font size of the numbers on the screen, depending on how many digits are in the dialed number. Because most people enter seven digits most frequently, your font size is large most of the time and becomes smaller only when necessary.

datebook

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can review your schedule of events for the week or by the day, and have the datebook play a reminder alarm for specific events.

To schedule or review events in the datebook:

Find it: Press MENU > **More** > **Datebook**

viewing by the week

When you open the datebook, your phone displays a calendar for the week. Lines or filled boxes under each day indicate scheduled events.

view by day

Select a day in the week view and press **VIEW** to see the day's events. You can store, edit, view, copy, and delete any event from the day view.

view by event

Select an event in the day view and press **VIEW** to open the detailed event view. You can edit, copy, and delete events from the event view.

add a new event

You can add a new event in two different ways.

Find it: Press ☰ > **More** > **Datebook** > Press ☰ > **Day View** > **[New Entry]**

or

Press ☰ > **Datebook** > *day* > ☰ > **New** > **Event**

To set up the **Event** detail, follow the steps below. A title is required for a datebook event. All other information is optional.

1. Press **CHANGE** to select **Title**.
2. Use the keypad keys to enter a title for the event.
3. Press **OK** to store the event title.

4 Press ·ȯ· up and down to scroll to other fields and enter information as necessary.

Other fields let you enter **Start**, **Duration**, **Date**, **Repeat**, and **Alarm**.

5 Press **DONE** to store the new event and return to the day view.

add a new task

You can add a new task by doing the following:

Find it: Press ☰ > **More** > **Datebook** > ☰ > **New** > **Task**

To set up the **Task** detail, follow the steps below. A summary is required for a datebook task. All other information is optional.

1 Select **Summary**, press **CHANGE**.

2 Use the keypad keys to enter a summary for the task.

3 Press **OK** to store the task summary.

4 Press ·ȯ· up or down to scroll to other fields and enter information as necessary.

Other fields let you enter **Start Date**, **Deadline**, **Priority**, **Completed**, **Category**, and **Status**.

5 Press **DONE** to store the new task and return to the day view.

change event/task information

To change information about an existing event/task:

Find it: Press ☰ > **More** > **Datebook**

1 Press ·ȯ· left or right to scroll to the scheduled event/task day.

2 Press ☰ > **Day View** to display the day view.

3 Press ·ȯ· up or down to scroll to the event/task you want to change.

4 Press **VIEW** to display the event/task.

5 Press **EDIT** to edit the event/task.

6 Press ·ô· up or down to scroll to the detail you want to change.

7 Press **CHANGE** to edit the information.

8 Use the keypad keys to enter the new information.

9 Press **DONE** to store the information.

copy an event/task

To copy information from a current event/task to a new event/task:

Find it: Press ☰ > **More** > **Datebook**

1 Press ·ô· left or right to scroll to the scheduled event/task day.

2 Press ☰ > **Day View** to display the day view.

3 Press ·ô· up or down to scroll to the event/task to copy.

4 Press ☰ to open the **Datebook Menu**.

5 Press ·ô· up or down to scroll to **Copy**.

6 Press **SELECT** to copy the event/task.

7 Press **YES** to confirm the copy.

Your phone assumes that you want to change the date, and displays the **Date** field.

8 Use the keypad keys to enter the date information.

9 Press ·ô· left or right to scroll to the day, month, and year.

10 Press **OK** to save the copy of the event/task.

11 Press ·ô· up or down to scroll to event/task details and edit the information as necessary.

12 Press **DONE** to store the new event/task and return to the day view.

delete an event

Find it: Press ☰ > **More** > **Datebook**

1. Press ·Ô· left or right to scroll to the scheduled event day.
2. Press ☰ > **Day View** to display the day view.
3. Press ·Ô· up or down to scroll to the event to delete.
4. Press ☰ to open the **Datebook Menu**.
5. Press ·Ô· up or down to scroll to **Delete**.
6. Press **SELECT** to select **Delete**.

   For non-repeating events, a confirmation message will pop up. Choose **Yes** or **No** to confirm or cancel the delete. For repeating events, the phone displays a delete event menu:

   Press ·Ô· up or down to scroll to **This Event Only** or **Repeat Events**. Press **SELECT** to select the event(s) to delete.

delete a task

Find it: Press ☰ > **More** > **Datebook**

1. Press ·Ô· left or right to scroll to the scheduled task day.
2. Press ☰ > **Day View** to display the day view.
3. Press ·Ô· up or down to scroll to the event to delete.
4. Press ☰ to open the **Datebook Menu**.
5. Press ·Ô· up or down to scroll to **Delete**.
6. Press **SELECT** to select **Delete**.
7. A confirmation message will pop up. Choose **Yes** or **No** to confirm or cancel the delete.

read messages with iMelody

Find it: Press ☰ > **Messages** > **Text Msgs**

To open the message:

1 Press ·◌· to scroll to the message.

2 Press **READ** to open the message.

The phone asks **Play Ring Tone?**

3 Press **YES** to play the iMelody. (iMelody will play only if the format is correct. A pop-up screen will notify you otherwise.) Press **NO** to cancel the playing.

iMelody downloadable ring tones via EMS

iMelody ringtones can be delivered via EMS to the handset, and can be set as ringers.

You can download up to 20 iMelody ringtones.

Note: Network, subscription dependent feature. Not available in all areas. Airtime, data charges, and/or additional charges may apply.

store iMelody

You can store the iMelody.

1 Press **STORE** and the file name appears on the display.

2 Press **OK** to save the iMelody into **My Tones**.

Note: Storing your iMelody may fail for two reasons: if the file name is duplicated or if the memory is full. If the file name is duplicated, rename the file under **Tone details**. If the memory is full, replace old ring tones with the new one.

FM radio

Plugging in the headset changes **MYMENU** to **RADIO** in the home screen. Press **RADIO** to turn the FM Radio on. Press again to turn it off.

When activated, press ·Ò· left or right to adjust the frequency. Press ·Ò· up or down to adjust the volume. Press **SPKR ON** to play the FM Radio through the speaker. Press **SPKR OFF** to play it through the headset.

use the radio presets

You can store up to nine preset radio stations.

1. Tune in the desired frequency by pressing ·Ò· left or right.
2. Press and hold number keys to save that number as the reset.

select a radio preset

Press number keys to select the corresponding radio preset.

Note: To achieve the best FM radio performance, a Motorola accessory is highly recommended.

Note: Optional original accessory available in selected countries. Please check with your local retailer for availability.

speakerphone

You can activate the speakerphone during a call by pressing **SPKR ON** and turn it off by pressing **SPKR OFF**.

multi-letter phonebook search

There are two Phonebook search methods, search by **Find**, and search by **Jump**.

To define the search method:

Find it: Press ☰ > **Phonebook** > ☰ > **Search By** > **Find** or **Jump**

search by jump

Press a keypad key 1 or more times to jump to entries that begin with the key's letters. Press a second letter to jump to entries beginning with the two letters you entered. You can enter up to three letters.

search by find

When you enter the first letter of an entry in your phonebook, a pop-up screen will ask you to input the name you would like to search for.

You can input the first several letters of the target entry's name, then press **OK**, and the phonebook will jump to the closest match entry.

basics

See page 1 for a basic phone diagram.

display

The *home screen* displays when you turn on the phone. To dial a number from the home screen, use the keypad keys to enter the number and press ⊙.

Note: Your home screen may look different from the one shown here, depending on your service provider.

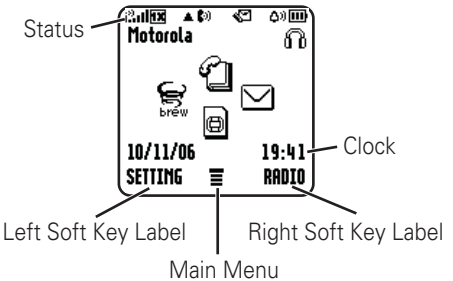

Soft key labels show the current soft key functions. For soft key locations, see page 1.

status indicators

Status indicators display at the top of the home screen:

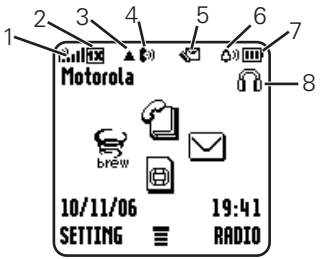

1 **Signal Strength Indicator –** Shows the strength of your phone's connection with the network.

2 **1X Indicator –** Shows that the phone is operating in 1X mode.

3 **Roam Indicator –** Appears when your phone uses another service provider network outside of your home network. This icon can also indicate your text entry mode (ie. alpha, numeric, symbol and etc).

4 **In Use Indicator –** Indicates when a call is in progress, and when you have a secure or insecure connection.

5 **Message Indicator –** Appears when you have a new voice or text message.

= text/voice message = message full

Note: When the message full indicator appears, it means the message inbox has reached the storage limit. Delete the old messages so that your phone can receive new ones.

6 **Alert Type Indicator –** Displays your alert type setting.

= Loud Ring = Vibe then Ring

= Soft Ring = Silent

= Vibrate

7 **Battery Level Indicator –** Shows the amount of charge left in your battery. The more bars present, the greater the charge.

8 **Radio Function Indicator–** Indicates that the radio function is available.

status icons

The status icons show the status of incoming calls, messages, and the battery.

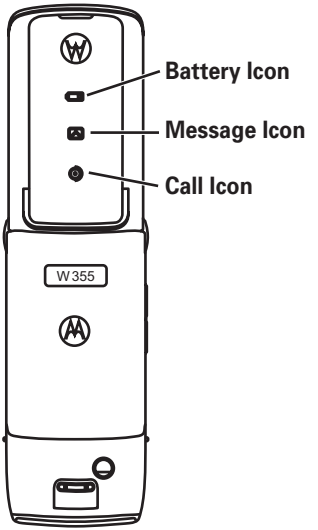

alert/Icon
call icon Icon rapidly flashes green for incoming calls from a known caller, and slowly flashes green when there is a missed call from a known caller. Icon rapidly flashes orange for incoming calls from an unknown caller, and slowly flashes orange when there is a missed call from an unknown caller.
message icon Icon flashes blue when there is a new text or voice message.
battery icon Icon flashes orange when the battery power is low, and is continually lit when the battery is charging.

Note: The Battery Icon cannot be turned off.

menus

From the home screen, press ☰ to enter the main menu and scroll up and down through the main menu list.

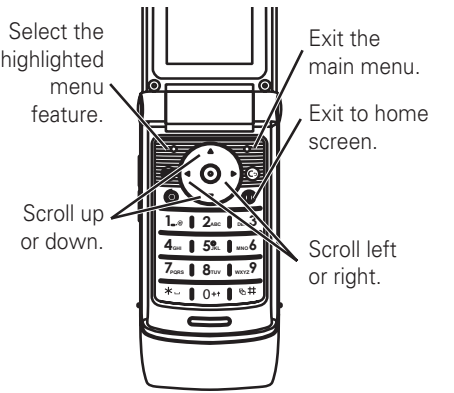

The following menu icons may be available, depending on your service provider and service subscription options.

menu features			
	Messages		UTK *
	Phonebook		Brew *
	Recent Calls		Datebook
	Games		Settings
	MyMenu		More

* Network, subscription dependent feature. Not available in all areas. Airtime, data charges, and/or additional charges may apply.

select a feature option

Some features require you to select an option from a list:

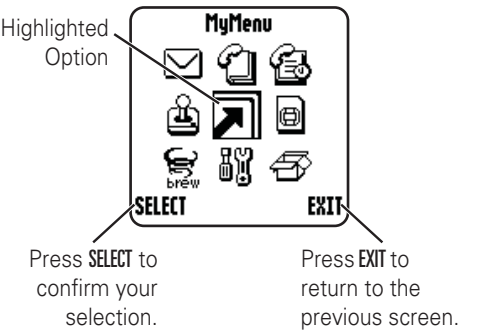

Press ·Ö· up or down to highlight the option you want.

Note: The UTK icon is displayed if your SIM card supports UTK. If not, the alarm clock icon is displayed instead.

text entry

Some features let you enter text.

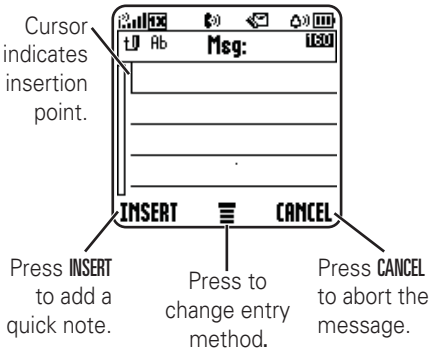

text entry mode

Press MENU in a text entry screen to select an entry mode:

entry mode	
TAP	Your Tap entry modes include: • Tap English • Tap Bahasa Indonesia • Tap Extended
iTAP™	Your Tap entry modes include: • iTAP English
Numeric	**Numeric** mode (12) enters numbers only.
Symbol	**Symbol** mode (@) enters symbols only.

iTAP™ mode

Press ☰ in a text entry screen to select and switch to **iTAP** mode. **iTAP** mode lets you enter words using one key press per letter. When **iTAP** is selected, iTAP displays on the home screen. The **iTAP** software combines your key presses into common words, and predicts each word as you enter it.

For example, if you press 2 7 7 5, your phone displays a list of word combination such as **appl**, **aspj**, and **aspk**.

When you enter three or more characters in a row, your phone will guess the rest of the word.

For example, if you enter **appl**, your phone might display:

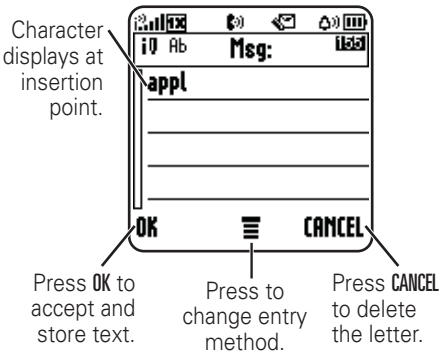

tap mode

Press ☰ in a text entry screen and select **Tap** mode. To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

numeric mode

Press the number keys to enter the numbers you want.

symbol mode

Press a keypad key to show its symbols at the bottom of the display.

Highlight the symbol you want and press the **SELECT** key.

volume

During a call, there are three answering modes for you to adjust the volume: **Normal**, **Earpiece**, and **Speaker On**. During a call, you can adjust the volume of the earpiece by pressing ·◌· right to increase and left to decrease or by pressing the side up/down key.

In addition, to mute a call you can press ☰ and select **Mute**.

Once a call has ended, no matter which setting (**Normal**, **Earpiece** or **Speaker On**), the volume will remain at that current volume setting.

navigation key

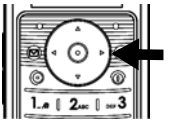

Press the *navigation key* up or down to highlight menu items, change feature settings, and play games.
Press **SELECT** to choose a highlighted menu item.

codes & passwords

To change your 4-digit codes or passwords:

Find it: Press > **Settings** > **Security** > **New Passwords**

Tip: To change passwords, you must confirm your password by entering it twice.

restrict calls

You can set Restrict Calls as **Allow All**, **Allow Phonebook**, and **Allow None**.

Need to enter the password (1234) to change.

etiquette mode

In social situations where audible rings, bells, or tones are inappropriate, such as in a movie theater, at a museum, play, etc., your phone can be set on etiquette mode. All incoming calls under this mode will be notified by inaudible vibration. Press and hold * to switch between **Loud Ring** and **Vibrate**.

ring style

Your phone rings and/or vibrates to notify you of an incoming call, message or other event. There are five ring types in your phone: **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibe then Ring**, and **Silent**.

my tones

To select **My Tones**:

Find it: Press ☰ > **Settings** > **Ring Styles** > **My Tones**

To select a ring type:

Find it: Press ☰ > **Settings** > **Ring Styles** > **Alert**

To turn **Minute Alert** on/off:

Find it: Press ☰ > **Settings** > **Ring Styles** > **Other Alert** > **Minute Alert**

To adjust the volume for different alert:

Find it: Press ☰ > **Settings** > **Ring Styles** > **Loud Ring/Soft Ring/Vibrate/Vibe then Ring/Silent Detail** > **Ring Volume**, **In Call**, **Message Tone**, **Alarms**, **Voicemail**, **Key Volume**, **Earpiece Vol**.

You can adjust the volume for alerts, key volume, and earpiece volume.

This phone contains 20 preloaded polyphonic ringtones.

time & date

To set the time and date format for your phone:

Find it: Press ☰ > **Settings** > **Initial Setup** > **Time and Date**

animation

Your phone plays an animation when it is powered on.

wallpaper

To set the wallpaper for your phone:

Find it: Press ☰ > **Settings** > **Personalize** > **Wallpaper**

This phone comes with several wallpaper images, which include **None**, **East**, **Identity**, **Relax**, **Sky**, and **Lovely**.

screen saver

To set a screen saver for your phone:

Find it: Press ☰ > **Settings** > **Personalize** > **Screen Saver** > **Picture**

This phone comes with several preloaded screen savers (**None**, **Coastal, Drift, Dream, Quirky, Amuse**). To set the screen saver delay time:

Find it: Press ☰ > **Settings** > **Personalize** > **Screen Saver** > **Delay**

answer options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

Find it: Press ☰ > **Settings** > **In-Call Setup** > **Answer Option**

option	
Any Key	Answer by pressing any key.
Send Key Only	Answer by pressing ⌂.
Open to Answer	Answer by opening the phone.

calls

This chapter describes features related to making and answering calls.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Find it: Press MENU > **Recent Calls** > desired call list

1 Highlight **Missed Calls**, **Received Calls**, or **Dialed Calls**, and press **SELECT**.

2 Highlight a call. A marker next to a call means the call connected.

- To call the number, press SEND.
- To see call details (like time and date), press the **VIEW**.

redial

1 Press SEND from the home screen to see the **Dialed Calls** list. Or press MENU > **Recent Calls** > **Dialed Calls**, **Missed Calls** and **Received Calls**.

2 Highlight the entry you want to call, then press SEND.

speed dialing

Once a phone number is stored in your **Phonebook**, you can access and dial that number using assigned speed dial keys.

Enter the location number of a stored number and press #. The phone will then automatically connect to that number. Press ⊙ to dial the number.

return a call

Your phone keeps a record of your unanswered calls, and displays **Missed Calls** on the screen.

1. Press **VIEW** to see the **Missed Calls** list.
2. Highlight the call you want to return, and press ⊙.

mute a call

When you are on a call, press ☰ > **Mute**.

For an incoming call, press ·⊙· left to mute the call/ring.

caller ID

Calling Line Identification (caller ID) shows the phone number for an incoming call in your internal display.

Your phone shows the caller's name when it is stored in your **Phonebook** or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a distinctive ringer ID for specific entries stored in your phonebook.

emergency calls

Your service provider programs one or more emergency phone numbers (such as 112 or 911) that you can call under any circumstances, even if the RUIM card is not inserted. You can dial and call the emergency number even when your phone is locked, when you are prompted to enter a code or password.

Note: Emergency numbers vary with different countries. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Contact your Service Provider for more information.

To call the emergency number at any time:

1 Press the keypad keys to dial the emergency number.

2 Press [⏻] to call the emergency number.

international calls

If your phone service includes international dialing, press and hold [0] to insert your local international access code (indicated by **+**). Then, press the keypad keys to dial the country code and phone number.

voicemail

You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone. Contact your service provider for more details.

When you receive a voicemail message, your phone displays a new voicemail indicator on the status pane (some networks only indicate when you have messages, whether they are new or not). If users delete all voicemail messages, the voicemail indicator will disappear.

To listen to your voicemail message:

Find it: Press ☰ > **Messages** > **Voicemail**

Your phone calls the voicemail phone number you stored.

special characters

In addition to pressing numbers on your keypad, you can insert special characters in a phone number.

While dialing (with digits visible in the display), you can press * twice to select hard pause **p**, three times to select time pause **w**.

option	
Hard pause (**p**)	Your phone waits until the call connects, then prompts you for confirmation before it dials the next digit(s).
Time pause (**w**)	Your phone waits until the call connects before it dials the next digit(s) in the series.

phonebook

feature	
add new entry	To add a new contact to your phonebook: MENU > **Phonebook** > MENU > **New** Select a location, enter entry details, and press **DONE**.
view contact list	To view phonebook list: MENU > **Phonebook** **Shortcut:** In the home screen, press ·Ö· up to access the **Phonebook** directly.
search entry by name	To search entry by name: MENU > **Phonebook** **Tip:** Enter the first letter of a name to show similar names. See "multi-letter phonebook search" on page 26.
delete an entry	To delete a phonebook entry: MENU > **Phonebook** > *highlight the name* > MENU > **Delete**

feature	
delete all entries	To delete all phonebook entries: Ⓜ > **Phonebook** > Ⓜ > **Delete All**
attach a phone number	To attach a phone number to an entry: Ⓜ > **Phonebook** > *highlight the name* > Ⓜ > **Attach Number**
view phone capacity	To view the remaining phone memory: Ⓜ > **Phonebook** > Ⓜ > **Phone Capacity**

recent calls

feature	
view call list	To view outgoing, incoming and missed call lists: Ⓜ > **Recent Calls** You may refer to your call history for more information such as number, time, date, and duration.
clear call list	To delete missed, called, received and stored call lists: Ⓜ > **Recent Calls** > *call list* > Ⓜ > **Delete All** > **YES**
view call times	To view the call duration of last call, dialed calls, received calls and all calls: Ⓜ > **Recent Calls** > **Call Timer**

messages

feature	
read old text messages	☰ > **Messages** > **Text Msgs**
delete text messages	☰ > **Messages** > *location* > *message* > ☰ > **Delete**
call the message sender	☰ > **Messages** > *location* > *message* > ☰ > **Call Back**
create a new message	☰ > **Messages** > **Create Messages**
edit an old message	☰ > **Messages** > *location* > *message* > ☰ > **Forward**

feature	
listen to a voice message	☰ > **Messages** > **Voicemail** When you receive a voicemail, your phone displays ✉. Sometimes ✉ won't disappear even if you checked the message. It depends on the condition of the service provider's system.
set message alert	To set a message alert type: ☰ > **Messages** > ☰ > **Text Msg Setup** > **SMS Alert**
set up voicemail box	To set up your voicemail box before you can receive a voicemail: ☰ > **Messages** > ☰ > **Voicemail Setup**

feature	
view the message memory meter	To view the remaining memory space for messages: M > **Messages** > M > **Memory Meter**
delete messages	To clean up your messages folders manually: M > **Messages** > M > **Cleanup Now** Select the desired folder that you would like to delete. To clean up your message folders automatically: M > **Messages** > M > **Auto Delete Inbox** or **Auto Delete Outbox**

feature	
auto retry	To set Auto Retry: M > **Messages** > M > **Auto Retry** > **Enable** or **Disable**
set call back display	To set call back display: M > **Messages** > M > **Call Back Display**
delivery ack	To set **Delivery Ack**: M > **Messages** > M > **Delivery Ack** > **Enable** or **Disable**

settings

feature	
set my tel. numbers	To set **My Tel. Numbers**: MENU > **Settings** > **Phone Status** > **My Tel. Numbers** Most carriers support up to two numbers. To view **My Tel. Numbers** during a call, press ·Ö· and scroll down to see the feature.
International code	To set an international code: MENU > **Settings** > **In-Call Setup** > **International Code** You can set Mode to **Automatic** or **Manual.** You can also set your preferred **Code**.

feature	
view ESN	MENU > **Settings** > **Phone Status** > **ESN**
view battery meter	MENU > **Settings** > **Phone Status** > **Battery Meter**
view software version	MENU > **Settings** > **Phone Status** > **SW Version**
view PRL version	MENU > **Settings** > **Phone Status** > **PRL Version**
set auto redial	MENU > **Settings** > **In-Call Setup** > **Auto Redial** > **Enable** or **Disable**
set voice privacy	MENU > **Settings** > **In-Call Setup** > **Voice Privacy** > **Enable** or **Disable**

feature	
define answer option	To set **Answer Option**: M > **Settings** > **In-Call Setup** > **Answer Option** > **Send Key Only**, **Any Key** or **Open to Answer**
reorder menu	M > **Settings** > **Personalize** > **Main Menu**
redefine left/right soft keys	M > **Settings** > **Personalize** > **Home Screen** > **Home Keys** > Left or Right soft key
create a greeting	To enter a greeting message: M > **Settings** > **Personalize** > **Greeting**

feature	
create a banner	To create a banner on the standby screen: M > **Settings** > **Personalize** > **Banner**
color setting	M > **Settings** > **Personalize** > **Color Setting** **Color Settings** selections include **Pacific**, **Mandarin**, **Evergreen**, **Autumn**, **Dusk**, and **Silver**.
my images	M > **Settings** > **Personalize** > **My Images**
wallpaper	M > **Settings** > **Personalize** > **Wallpaper** **Wallpaper** selections include **None**, **East**, **Identity**, **Relax**, **Sky**, and **Lovely**.

feature	
lantern timeout	☰ > Settings > Initial Setup > Lantern Timeout Lantern Timeout selections include 30 sec, 1 minute, and 2 minutes.
set time and date format	☰ > Settings > Initial Setup > Time and Date
backlight	☰ > Settings > Initial Setup > Backlight
set scroll pattern	☰ > Settings > Initial Setup > Scroll
set start-up animation	☰ > Settings > Initial Setup > Animation
select a language	To select a language: ☰ > Settings > Initial Setup > Language

feature	
set DTMF	To select DTMF length: ☰ > Settings > Initial Setup > DTMF
set hyphenation	To select hyphenation: ☰ > Settings > Initial Setup > Hyphenation
clear phone data	To clear the entered information in the phone: ☰ > Settings > Initial Setup > Master Clear
phone reset	To restore the phone's default values: ☰ > Settings > Initial Setup > Master Reset
set service tone	To set Service Tone: ☰ > Settings > Network > Service Tone > On or Off

feature	
set call drop tone	To set **Call Drop Tone**: M > **Settings** > **Network** > **Call Drop Tone** > **On** or **Off**
select a band	M > **Settings** > **Network** > **Band Selection**
set area code display	To set the area code display: M > **Settings** > **Network** > **Area Code** > **Show** or **Hide**
set auto answer	To set **Auto Answer** when the headset is connected: M > **Settings** > **Headset** > **Auto Answer**

feature	
ring styles	M > **Settings** > **Ring Styles** **Ring Styles** selections include: Alert Profile **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibe then Ring**, and **Silent** Alert Details **Ring Volume**, **In Call**, **Message Tone**, **Alarms**, **Voicemail**, **Key Volume**, **Earpiece Vol.** My Tones Other Alert **Minute Alert** > **Enable** or **Disable**

feature	
changing password	To change the 4-digit password: Ⓜ > Settings > Security > New Passwords The default password is set to 1234.
home screen	To modify what is displayed on the home screen: Press Ⓜ > Settings > Personalize > Home Screen From here, you can choose to modify the Home Keys, Layout, and Clock Set.
main menu	To modify whether the main menu uses icons or words and their order: Press Ⓜ > Settings > Personalize > Main Menu

feature	
set screen saver	To set Screen Saver: Ⓜ > Settings > Personalize > Screen Saver > Picture or Delay

more features

feature	
calculator	Ⓜ > More > Calculator
stop watch	To use Stop Watch: Ⓜ > More > Stop Watch
lantern	To set Lantern: Ⓜ > More > Lantern
Datebook	To use Datebook: Ⓜ > More > Datebook
alarm clock	To set Alarm Clock: Ⓜ > More > Alarm Clock

feature	
set service dial	To set Service Dial: ☰ > More > Service Dial

game

feature	
play a game	To start a game: ☰ > Games > *game*

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.84 W/kg.[1] As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.[2] In this case, the highest tested SAR value is 0.32 W/kg.[1]

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (`http://www.who.int/emf`) or Motorola, Inc. (`http://www.motorola.com/rfhealth`).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

FCC Notice To Users

FCC Notice Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: `http://www.who.int./peh-emf`

index

A

accessories 14
alert
  defined 36
  indicators 29
  interval 45
  message type 45
  setting 36
answer key 1
answering a call 18, 38

B

battery
  charging 16
  extending battery life 16
  installing 15

C

call
  answer options 18, 38
  call waiting 40
  dialed calls list 39
  emergency number 41
  international access code 41
  missed call 40
  mute 40
  received calls list 39
  redial 39
  ring style 36
  unanswered call 40
Call Failed, Number Busy message 39
call waiting 40
caller ID 40
calling line identification. See caller ID
camera 2
clock
  setting 37
codes
  changing 35
  default 35
  forgetting 35
correcting entry errors 18

D

date, setting 37
dialed calls list 39
display
  description 27
  home screen 27
  personalizing 47

E

earpiece 1
emergency number 41
end key 1
external display 2

F

flip 38

H

home screen
  defined 27

I

Incoming Call message 40
indicators
  alert type 29
  message waiting 28
  status, in home screen 28
international access code 41
iTAP software 33

K

key
  answer 1
  end 1
  left soft key 1, 27
  menu 1
  navigation key 35
  power 1
  right soft key 1, 27
  send 1
  volume 36
  volume control 1, 34
keypad 38

L

left soft key
  functions 1, 27
lock
  RUIM card 17

M

menu
  entering text 32
  icons, in home screen 31
  using 30
menu key 1
message waiting
    indicator 28
missed call 40
multi-letter phonebook
    search 26
mute a call 40

N

navigation key 35
numbers, entering 34

O

open to answer 38
optional accessory 14
optional feature 14

P

passwords. See codes
phone
  answer options 18, 38
  clear stored call lists 44
  codes 35
  date, setting 37
  ring style 36
  security code 35
  time, setting 37
  turning on/off 17
  unlock code 35
phone number
  international access code 41
  redialing 39
  storing in phonebook 43
phonebook
  picture ID 40
  searching 26
  storing an entry 43
photo
  picture ID 40
picture
  viewing 40
picture ID 40
PIN code
  entering 17
power key 1
predictive text entry 33

R

received calls list 39
recent calls 39
redial
  busy number 39
right soft key
  functions 1, 27
ring style, setting 36
ring tone
  changing 36
ringer volume, setting 36
RUIM card
  locking 17
RUIM PIN code
  entering 17

S

safety information 7
security code
  changing 35
  default 35
send key 1
silent alert, setting 36
SIM Blocked message 17
SIM card
  defined 15
  installing 15
  PIN code entry 17
  precautions 15
  SIM Blocked message 17

smart key 2
soft keys
  functions 27
  illustration 1
symbols, entering 34

T

tap method text entry 34
text
  entering 32
  iTAP software predictive text entry 33
  numeric method 34
  symbol method 34
  tap method 34
time, setting 37

U

unanswered call 40
unlock code
  bypassing 35
  changing 35
  default 35

V

vibrate alert
  setting 36
voicemail 42
volume
  keypad 36
  ringer 36
volume keys 1, 34

Chào mừng

Chào mừng bạn đã đến với thế giới thông tin di động kỹ thuật số của Motorola. Chúng tôi vui mừng khi bạn đã chọn máy điện thoại di động Motorola W355.

Phím danh mục
Mở danh mục khi có biểu tượng hiển thị, hoặc mở chức năng đang chọn.
Phím mềm trái
Thực hiện các chức năng hiển thị ở góc dưới bên trái.
Phím nhắn tin
Điều chỉnh âm lượng
Phím gọi/trả lời
Gọi và trả lời điện thoại. Bấm để mở danh sách các cuộc gọi đi khi ở chế độ chờ.
Cổng cắm bộ sạc
Cắm bộ sạc pin.
Tai nghe
Nghe điện thoại và lời nhắn.
Phím mềm phải
Thực hiện các chức năng hiển thị ở góc dưới bên phải.
Phím xóa
Phím mở / tắt
Tắt / mở điện thoại, kết thúc cuộc gọi và thoát khỏi hệ thống danh mục.
Phím di chuyển
Cuộn trong danh bạ, danh sách và cài đặt âm lượng.
Microphone

Ghi chú: Hình vẽ chỉ có tính chất minh họa. Có thể hơi khác một ít so với thực tế về hình dáng máy, các phím và nội dung hiển thị. Vui lòng đối chiếu với máy điện thoại thật.

hãy chú ý!

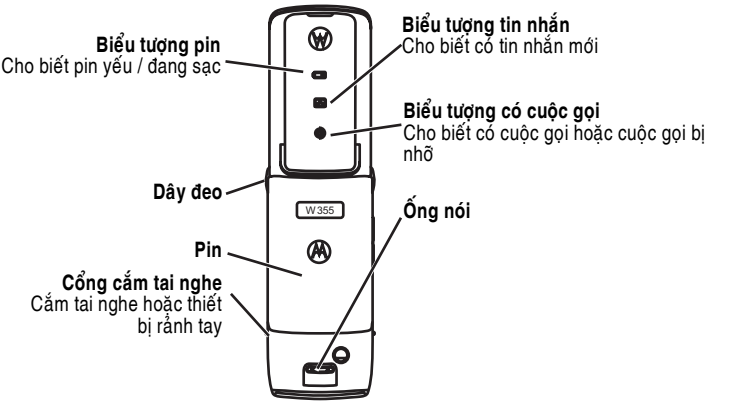
Biểu tượng pin
Cho biết pin yếu / đang sạc
Biểu tượng tin nhắn
Cho biết có tin nhắn mới
Biểu tượng có cuộc gọi
Cho biết có cuộc gọi hoặc cuộc gọi bị nhỡ
Dây đeo
W355
Ống nói
Pin
Cổng cắm tai nghe
Cắm tai nghe hoặc thiết bị rảnh tay

Ghi chú: Hình vẽ chỉ có tính chất minh họa. Có thể hơi khác một ít so với thực tế về hình dáng máy, các phím và nội dung hiển thị. Vui lòng đối chiếu với máy điện thoại thật.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Các chức năng của máy điện thoại phụ thuộc vào khả năng và việc cài đặt mạng di động của nhà cung cấp dịch vụ. Hơn nữa, một số tính năng có thể đã bị nhà cung cấp dịch vụ tắt hoặc giới hạn. Hãy liên hệ với nhà cung cấp dịch vụ về các chức năng của máy điện thoại và các dịch vụ hiện có. Mọi đặc tính, chức năng, và cấu hình của sản phẩm cũng như thông tin có trong sách hướng dẫn sử dụng được căn cứ trên các thông tin mới nhất và được cho là chính xác nhất tại thời điểm in sách. Công ty Motorola giữ quyền thay đổi hoặc cập nhật mọi thông tin, cấu hình mà không cần phải thông báo trước.

MOTOROLA, biểu tượng cách điệu chữ M là nhãn hiệu đã đăng ký ở Văn phòng Thương hiệu và Bản quyền Mỹ. Các sản phẩm và dịch vụ khác là tài sản của các công ty tương ứng. Thương hiệu Bluetooth có chủ sở hữu và Motorola có giấy phép sử dụng. Java và các biểu tượng liên quan đến Java thuộc quyền sở hữu của công ty Sun Microsystems, Inc. ở Mỹ và các nước khác.

Microsoft và Windows là thương hiệu đã đăng ký của công ty Microsoft Corporation; và Windows XP cũng là thương hiệu của công ty Microsoft Corporation.

© Motorola, Inc., 2006.

Lưu ý: các thay đổi về radio trên máy điện thoại, không được Motorola chuẩn y, đều có thể làm cho người dùng mất quyền sử dụng máy.

Lưu ý về bản quyền phần mềm

Các sản phẩm của Motorola trình bày trong hướng dẫn này bao gồm các phần mềm có bản quyền của Motorola và các công ty khác, được lưu trong bộ nhớ của máy hoặc dưới hình thức khác. Luật pháp của Mỹ và các quốc gia khác bảo vệ một số độc quyền của Motorola và các công ty khác về bản quyền phần mềm này, ví dụ như quyền phân phối, sao chép phần mềm này. Theo đó, mọi sửa đổi, phân phối hoặc sao chép các phần mềm có trong sản phẩm của Motorola đều bị cấm. Hơn nữa, mua sản phẩm Motorola không có nghĩa là được phép thực hiện những điều trên đối với các sản phẩm của công ty Motorola và những công ty khác, ngoại trừ quyền sử dụng sản phẩm như quy định của pháp luật hiện hành.

nội dung

hãy kiểm tra! 2
An toàn và Thông tin chung 7
Sử dụng và Bảo quản 14
các tính năng cơ bản . 16
giới thiệu sách hướng dẫn 16
thẻ RUIM 17
pin 17
hướng dẫn sử dụng pin 18
tắt và mở máy điện thoại 19
gọi điện thoại 20
trả lời cuộc gọi 20
sửa lỗi nhập 20
các tính năng nổi bật . 21
thay đổi cỡ chữ 21
sổ hẹn 21
đọc tin nhắn với iMelody 26
đài FM 27
loa 27
tìm kiếm trong danh bạ 28
các chức năng chính . 29
màn hình 29
các biểu tượng 30
biểu tượng trạng thái . 31
danh mục 32
nhập liệu 34
âm lượng 36
phím di chuyển 36
mã khóa và mật mã . 37
hạn chế cuộc gọi . . . 37
chế độ lịch sự 37
cài đặt máy điện thoại 38
kiểu chuông 38
ngày & giờ 39
hoạt hình 39
hình nền 39
bảo vệ màn hình . . . 39
chọn kiểu trả lời 40
tính năng về cuộc gọi 41
các cuộc gọi vừa qua 41
gọi lại cho một số điện thoại 41
quay số nhanh 42
trả lời cuộc gọi 42
câm tiếng cuộc gọi . . 42
số của người gọi . . . 42

gọi khẩn cấp 43
gọi quốc tế 43
thư thoại 43
các ký tự đặc biệt . . . 44
các tính năng khác . . . 45
danh bạ 45
cuộc gọi gần đây . . . 46
tin nhắn 47
cài đặt 49
các tính năng khác . . . 54
trò chơi 55
Độ hấp thu sóng điện từ - SAR 56
Thông tin từ Tổ chức Y tế Thế giới - WHO . . . 57
Thông báo về FCC cho người sử dụng 58
chỉ mục 59

Ghi chú: Các chức năng trong máy điện thoại có thể hơi khác, tùy từng quốc gia hoặc khu vực. vui lòng liên hệ với Trung tâm phục vụ khách hàng, đại lý hoặc cửa hàng bán máy điện thoại nếu bạn có thắc mắc về chức năng của máy điện thoại. Công ty Motorola có quyền điều chỉnh và thay đổi sách hướng dẫn sử dụng mà không cần thông báo trước cho bất kỳ ai về sự điều chỉnh hoặc thay đổi đó.

sơ đồ danh mục

danh mục chính

Messages
- Create Message
- Voicemail
- Text Msgs
- Quick Notes
- Outbox
- Drafts

Phonebook
- [New Entry]

Recent Calls
- Missed Calls
- Received Calls
- Dialed Calls
- Call Timer

Games
- Football
- Crazy
- Rebels

MyMenu
- [New MyMenu]

UTK *

Datebook *

Settings
- Ring Styles
- Phone Status
- In-Call Setup
- Security
- Personalize
- Initial Setup
- Network
- Headset

More
- Calculator
- Stop Watch
- Lantern
- Datebook
- Alarm Clock
- Service Dial

* phụ thuộc vào mạng di động

Các chức năng trong máy điện thoại có thể hơi khác, tùy từng quốc gia hoặc khu vực. vui lòng liên hệ với Trung tâm phục vụ khách hàng, đại lý hoặc cửa hàng bán máy điện thoại nếu bạn có thắc mắc về chức năng của máy điện thoại. Công ty Motorola có quyền điều chỉnh và thay đổi sách hướng dẫn sử dụng mà không cần thông báo trước cho bất kỳ ai về sự điều chỉnh hoặc thay đổi đó.

Trên đây là sơ đồ danh mục chuẩn. Vui lòng xem danh mục thực sự ở trên máy điện thoại.

An toàn và Thông tin chung

Chương này có các thông tin quan trọng về cách sử dụng máy điện thoại hiệu quả và an toàn. Đề nghị bạn đọc kỹ các thông tin này trước khi sử dụng máy.*

Đặc tính của sóng vô tuyến (Radio Frequency - RF)

Điện thoại di động của bạn là một thiết bị thu phát sóng vô tuyến. Khi đang MỞ, nó gửi và nhận các tín hiệu sóng vô tuyến. Khi bạn nói chuyện điện thoại, hệ thống điều khiển cuộc gọi sẽ qui định cường độ phát sóng của máy điện thoại.

Máy điện thoại Motorola của bạn được thiết kế phù hợp với các tiêu chuẩn và hướng dẫn của các tổ chức quốc gia và quốc tế đã thiết lập để bảo vệ cộng đồng khỏi tác động của việc tiếp xúc với năng lượng điện từ của sóng vô tuyến.

Các lưu ý khi sử dụng máy điện thoại

Để đảm bảo máy điện thoại hoạt động tốt và sự an toàn của tín hiệu sóng điện từ với cơ thể con người, phù hợp với các qui định ở trên, bạn luôn nên theo các hướng dẫn an toàn được nêu sau đây.

Bảo quản ăng ten ngoài

Nếu máy điện thoại có ăng ten ngoài, chỉ dùng ăng ten được nhà sản xuất cung cấp

* Các thông tin trong hướng dẫn này thay thế các thông tin đã nêu về an toàn trước ngày 1 tháng 5 năm 2006.

hoặc do Motorola phê chuẩn. Sử dụng ăng ten không phù hợp hoặc có sửa đổi hay những thiết bị gắn thêm có thể gây hại cho điện thoại và/hoặc không phù hợp với các qui định ở nước sở tại.

KHÔNG cầm vào ăng ten khi đang SỬ DỤNG điện thoại vì như vậy sẽ ảnh hưởng đến chất lượng cuộc thoại và tốn năng lượng hơn mức cần thiết.

Sử dụng điện thoại

Khi nói chuyện điện thoại, cầm máy như cách cầm điện thoại để bàn thông thường.

Nếu bạn không cầm máy điện thoại để nghe nói như bình thường và cũng không dùng các thiết bị đeo đạt tiêu chuẩn, nên để máy và ăng ten cách xa cơ thể ít nhất 2,5cm (1 inch) khi máy đang hoạt động.

Khi sử dụng các chức năng về dữ liệu của máy điện thoại, dùng hoặc không dùng dây cáp truyền, nên để máy điện thoại và ăng ten cách xa cơ thể ít nhất 2,5cm (1 inch) khi máy đang hoạt động.

Sử dụng các phụ kiện không được Motorola công nhận, gồm cả các loại pin và ăng ten, có thể làm cho máy điện thoại bị vượt quá giới hạn an toàn về sóng điện từ. Vui lòng xem danh sách các phụ kiện Motorola công nhận tại trang web `www.motorola.com`.

Nhiễu sóng điện từ và sự tương thích

Hầu như tất cả các thiết bị điện đều có thể bị nhiễm sóng điện từ nếu không được bảo vệ, che chắn, hay nói cách khác là được thiết kế để tương thích với sóng điện từ. Trong vài trường hợp, máy điện thoại có thể gây ra nhiễu điện từ.

Tuân theo hướng dẫn để tránh làm nhiễu các thiết bị

Tắt ngay máy điện thoại ở những nơi có treo bảng yêu cầu. Những nơi này có thể có những thiết bị y tế hoặc chăm sóc sức khỏe, nhạy cảm với các nguồn sóng điện từ bên ngoài.

Khi ở trên máy bay, hãy tắt máy điện thoại khi được yêu cầu. Nếu máy điện thoại có chế độ dùng được trên máy bay hoặc chức năng tương tự, hãy hỏi ý kiến của phi hành đoàn trước.

Máy điều hoà nhịp tim

Nếu bạn có sử dụng máy điều hòa nhịp tim, hãy hỏi ý kiến bác sĩ trước khi dùng máy điện thoại di động.

Người sử dụng máy điều hoà nhịp tim nên:

- LUÔN LUÔN giữ máy điện thoại cách máy điều hoà nhịp tim hơn 20 cm (khoảng 8 inch) khi máy điện thoại đang MỞ
- KHÔNG để máy trong túi áo ngực.
- Nghe điện thoại ở tai phía bên kia so với máy điều hoà nhịp tim để giảm thiểu nhiễu.
- Nếu bạn có nghi ngờ máy điều hoà nhịp tim đang bị nhiễu vì điện thoại, TẮT ngay máy điện thoại.

Thiết bị trợ thính

Một vài loại máy điện thoại di động có thể gây nhiễu tới các thiết bị trợ thính. Trong trường hợp này bạn cần liên hệ với nhà sản xuất thiết bị trợ thính hoặc bác sĩ để được chỉ dẫn thêm.

Các thiết bị y tế khác

Nếu bạn có sử dụng bất kỳ một thiết bị y tế cá nhân nào, hãy tham khảo nhà sản xuất thiết bị hoặc bác sĩ để biết nếu thiết bị chịu

được tác động của sóng điện từ.

Cẩn thận khi lái xe

Xem lại luật qui định về sử dụng điện thoại di động trong khu vực mà bạn đang lái xe. Luôn tuân thủ đúng luật.

Nếu bạn sử dụng điện thoại khi đang lái xe, bạn cần:

- Tập trung lái xe. Sử dụng điện thoại có thể làm bạn mất tập trung lái xe. Hãy ngắt cuộc gọi nếu bạn không thể tập trung vào việc lái xe.
- Sử dụng tính năng “rảnh tay”, nếu có.
- Lái xe vào lề đường và dừng lại trước khi gọi hoặc trả lời cuộc gọi khi điều kiện lái xe bắt buộc phải như thế.

Hướng dẫn lái xe an toàn được in ở cuối quyển sách này và / hoặc ở trang web: www.motorola.com/callsmart.

Các lưu ý khi sử dụng máy

Tuân thủ mọi biển báo khi sử dụng máy điện thoại ở khu vực công cộng, như ở bệnh viện, khu vực nổ mìn.

Đệm hơi an toàn trong ô tô

Không để máy điện thoại di động lên trên đệm hơi hoặc nơi đệm sẽ phồng lên.

Môi trường dễ nổ

Khu vực dễ cháy nổ thường có thông báo rõ ràng hoặc cũng có thể không có. Các nơi dễ cháy nổ này có thể là nơi tiếp nhiên liệu như hầm tàu, trạm xăng dầu, các phương tiện vận tải nhiên liệu và hoá chất, các nơi có nhiên liệu để ngoài trời, những khu vực có nhiều bụi hoá chất, bụi kim loại.

Khi ở trong các môi trường như vậy, tắt máy điện thoại, không tháo, lắp hoặc sạc pin. Tia lửa từ pin điện thoại trong môi trường này có thể làm cháy hoặc nổ.

Máy hỏng

Nếu máy điện thoại hoặc pin bị ẩm hoặc ướt nhiều, bị rơi nặng, đừng cố sử dụng mà hãy mang máy đến trung tâm dịch vụ bảo hành của Motorola để xem xét. Không cố làm khô máy bằng các nguồn nhiệt bên ngoài như là lò vi ba.

Pin và Bộ sạc

Mọi pin điện thoại có thể gây hư hỏng tài sản, thương tích hoặc bỏng nếu có vật dẫn điện như nữ trang, chìa khoá hoặc dây chuyền chạm vào mạch pin. Các vật này có thể nối mạch và bị nóng lên. Cẩn trọng với các pin đã xạc, nhất là khi cất trong túi, ví hay các vật chứa bằng kim loại. **Chỉ sử dụng pin và bộ sạc chính gốc Motorola**.

Cảnh báo: Đề phòng bị thương, không vứt pin vào lửa.

Máy điện thoại và pin có thể có các ký hiệu hoặc biểu tượng sau:

Biểu tượng	Giải thích
	Thông tin an toàn quan trọng.
	Không được tiêu hủy máy hoặc pin trong lửa.
	Máy điện thoại hoặc pin phải được tái chế theo qui định của địa phương. Liên hệ với giới trách địa phương để biết thêm chi tiết.
	Không được vứt máy hoặc pin vào thùng rác.
	Máy điện thoại có pin loại lithium ion.
	Không làm ướt máy điện thoại, pin và bộ sạc.

Biểu tượng	Giải thích
	Nghe nhạc quá lớn sẽ ảnh hưởng đến thính lực.

Bị hóc

Máy điện thoại có nhiều bộ phận nhỏ, có thể gây hóc cho trẻ nhỏ. Giữ máy và các phụ kiện ở xa tầm với của trẻ em.

Các bộ phận kính

Một số bộ phận của máy điện thoại được làm bằng kính. Phần kính này có thể bị vỡ nếu máy bị rơi trên nền cứng hoặc va đập mạnh. Nếu kính bị vỡ, đừng chạm vào chỗ vỡ hoặc tháo kính vỡ ra. Ngưng sử dụng máy cho đến khi trung tâm bảo hành thay kính mới cho bạn.

Động kinh/Hoa mắt

Có một số người dễ bị động kinh hoặc hoa mắt khi nhìn chăm chú vào màn hình nhấp nháy, ví dụ như khi xem vô tuyến truyền hình hoặc chơi trò chơi điện tử. Chứng động kinh hoặc hoa mắt này có thể xảy ra với người chưa từng có tiền sử bệnh động kinh hoặc hoa mắt.

Nếu bạn hoặc trong gia đình bạn có người có tiền sử bệnh động kinh hoặc hoa mắt, vui lòng hỏi bác sĩ trước khi chơi trò chơi trong máy điện thoại hoặc mở chế độ nhấp nháy màn hình (nếu có).

Hãy ngưng việc sử dụng máy điện thoại và đi khám bác sĩ nếu có các triệu chứng sau: co giật người, co giật mắt hoặc cơ, mất tri thức, cử động vô thức hoặc mất phương hướng. Hãy luôn để màn hình ở mức xa mắt nhất có thể được, chơi trò chơi trong môi trường ánh sáng đầy đủ, nghỉ ít nhất 15

phút sau mỗi tiếng chơi trò chơi và ngừng không chơi trò chơi khi bạn đã mệt.

Nhắc nhở về việc mở loa quá lớn

Mở loa hết cỡ để nghe nhạc hoặc nói chuyện có thể ảnh hưởng đến thính lực của bạn.

Bấm phím nhiều lần

Khi bạn thực hiện nhiều lần các động tác bấm phím, bạn có thể bị mỏi bàn tay, cánh tay, vai, cổ hoặc các bộ phận khác của cơ thể. Nếu bạn bị mỏi hoặc đau khi đang hoặc sau khi bấm phím, hãy ngưng sử dụng máy điện thoại và nên đi khám bác sĩ.

Sử dụng và Bảo quản

Để bảo quản tốt máy điện thoại Motorola, hãy giữ máy khỏi:

mọi chất lỏng

Không để máy bị ướt nước, bị mưa, mồ hôi hoặc trong môi trường có độ ẩm cao.

nhiệt độ quá cao / thấp

Không để máy ở môi trường nhiệt độ dưới -10°C/14°F hoặc trên 45°C/113°F.

lò vi sóng

Không làm khô máy bằng cách cho vào lò vi sóng.

bụi bẩn

Không để máy bị bẩn vì bụi, bùn, cát, thức ăn hoặc các chất bẩn khác.

lau máy

Để lau máy điện thoại, chỉ nên dùng vải mềm, khô. Không nên dùng cồn hoặc các cách làm vệ sinh khác.

bị rơi

Không làm rơi máy điện thoại.

Tái chế để bảo vệ môi trường

Khi nhìn thấy biểu tượng này trên sản phẩm Motorola, xin đừng hủy bỏ sản phẩm chung với rác sinh hoạt.

Tái chế máy điện thoại và phụ kiện

Vui lòng không hủy bỏ máy điện thoại và các phụ kiện như bộ sạc, tai nghe, chung với rác sinh hoạt. Ở một số nước hoặc khu vực đã có hệ thống thu hồi và xử lý rác thải điện tử. Vui lòng liên hệ với chính quyền địa phương để biết thêm chi tiết. Nếu nơi bạn ở chưa có hệ thống thu hồi đã nêu, hãy gửi lại máy điện thoại hoặc phụ kiện không dùng cho Trung tâm Dịch vụ được chỉ định của Motorola tại khu vực của bạn.

các tính năng cơ bản

giới thiệu sách hướng dẫn

Phần này hướng dẫn cách xác định tính năng trong danh mục như sau:

Tìm chức năng: Bấm ☰ > **Recent Calls** > **Dialed Calls**

Trong ví dụ này, khi ở màn hình chờ, bấm phím ☰ để mở danh mục chính, chọn **Recent Calls**, rồi di chuyển đến và chọn **Dialed Calls**.

Bấm ·◌· lên hoặc xuống để di chuyển tới mục chọn. Bấm **SELECT** để chọn tính năng trong danh mục.

biểu tượng	
	Cho biết tính năng này phụ thuộc vào mạng di động hoặc việc đăng ký sử dụng. Liên hệ với nhà cung cấp dịch vụ để biết thêm chi tiết.
	Cho biết tính năng đòi hỏi phải có phụ kiện chọn thêm.

thẻ RUIM

Thẻ RUIM (*Removable-User Identity Module*) chứa thông tin cá nhân như số điện thoại và danh bạ.

lắp thẻ RUIM

1

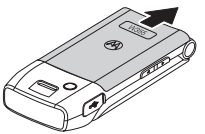

2

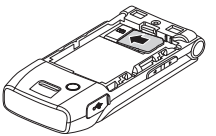

Cảnh báo: Không bẻ cong hoặc làm xước thẻ. Tránh không cho thẻ RUIM tiếp xúc với vật tĩnh điện, nước hoặc bụi.

pin

lắp pin

1

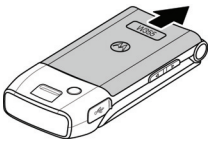

2

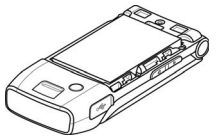

3

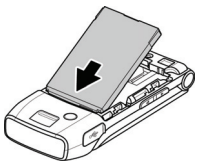

4

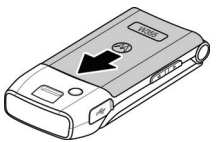

sạc pin

Pin mới khi xuất xưởng không được sạc đầy. Bạn phải lắp và sạc pin trước khi sử dụng máy điện thoại. Một số pin chỉ hoạt động tốt sau một vài lần sạc/xả.

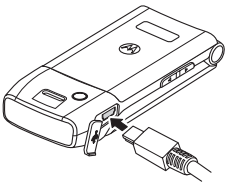

Khi sạc xong, hình biểu thị pin sẽ chuyển thành hình pin đầy (▮▮▮) và màn hình hiển thị dòng chữ **Charging Complete**.

Hướng dẫn: Bạn không nên sạc nhồi pin. Máy sẽ hoạt động tốt nhất khi bạn sạc và xả một vài lần.

hướng dẫn sử dụng pin

Tuổi thọ của pin phụ thuộc vào mạng, cường độ sóng, nhiệt độ, các tính năng và các phụ kiện mà bạn sử dụng.

- Luôn sử dụng pin và bộ sạc chính gốc Motorola. Chế độ bảo hành máy sẽ không bao gồm các hư hỏng do sử dụng pin và/hoặc bộ sạc không của Motorola.
- Pin mới hoặc pin để lâu không dùng cần được sạc lâu hơn.
- Sạc pin trong môi trường nhiệt độ phòng.
- Khi cất giữ, hãy để pin ở trạng thái không sạc, ở nơi mát, tối và khô ráo.
- Không để pin trong môi trường nhiệt độ dưới -10°C (14°F) hoặc quá 45°C

(113ºF). Luôn mang theo điện thoại khi rời khỏi xe ôtô.

- Sau một khoảng thời gian, pin sẽ bị giảm hiệu suất và cần phải sạc lâu hơn. Đó là hiện tượng bình thường. Nếu bạn nhận thấy thời gian sử dụng sau khi sạc pin giảm đi thì đó là lúc nên mua pin mới.

Liên hệ với trung tâm tái chế ở địa phương để tiêu hủy pin cho thích hợp.

Cảnh báo: Không hủy pin trong lửa vì có thể gây nổ.

Vui lòng đọc kỹ những thông tin về sử dụng pin trong mục “An toàn và Thông tin chung” in ở trong sách này trước khi sử dụng máy.

tắt và mở máy điện thoại

Bấm và giữ phím ⏻ 2 giây để mở máy. Nếu được hỏi, nhập vào mã số thẻ RUIM gồm 8 chữ số hoặc mã số mở khóa gồm 4 chữ số.

Power / End Key

Cảnh báo: Nếu bạn nhập sai mã số PIN 3 lần liên tiếp, thẻ RUIM của bạn sẽ bị khóa lại và máy điện thoại hiển thị câu **RUIM Blocked**. Hãy liên hệ với nhà cung cấp dịch vụ khi gặp trường hợp này.

Để tắt máy, bấm và giữ phím ⏻ trong khoảng 2 giây. Nếu được hỏi, bấm mã số mở khóa gồm 4 chữ số.

gọi điện thoại

Từ màn hình chính, nhập số muốn gọi (dưới 32 chữ số) và bấm ◉ để gọi.

Để kết thúc cuộc gọi, bấm ⏻.

trả lời cuộc gọi

Để trả lời cuộc gọi đến, bấm ◉. Xem thêm mục “Cách trả lời điện thoại” ở trang 40 về các cách trả lời một cuộc gọi tới.

Để kết thúc cuộc gọi, bấm ⏻.

Nếu máy của bạn có thông tin của người gọi đến, số máy sẽ được hiển thị trên màn hình. Nếu số điện thoại này có lưu trong danh bạ **Phonebook**, tên người gọi sẽ được hiển thị.

sửa lỗi nhập

Để sửa số nhập sai, bấm C để xóa từng số một. Để xóa hết các số cùng một lúc, bấm và giữ phím C trong hơn một giây.

các tính năng nổi bật

Bạn có thể dùng máy điện thoại này vào nhiều việc hơn là chỉ nghe và nói! Chương này giới thiệu một số tính năng nổi bật của máy điện thoại.

thay đổi cỡ chữ hiển thị

Thay đổi cỡ chữ hiển thị là một chức năng thông minh giúp bạn xem các số được phóng lớn hiển thị trên màn hình, tùy theo số lượng các con số có trên màn hình. Thông thường chúng ta chỉ nhập vào 7 con số, cỡ chữ luôn được hiển thị to và chỉ thu nhỏ lại nếu cần.

sổ hẹn

Số hẹn cho phép bạn lên lịch và tổ chức các sự kiện như cuộc hẹn và buổi họp mặt. Bạn có thể xem lại lịch trình cho cả tuần hoặc cho từng ngày, và cài chuông nhắc báo mỗi khi có một sự kiện nào đó đến hạn.

Để tạo hoặc xem lại các sự kiện trong sổ hẹn:

Tìm chức năng: Bấm ☰ > **More** > **Datebook**

xem theo tuần

Khi bạn mở sổ hẹn, máy sẽ hiển thị lịch cho cả tuần. Các dòng hay ô dưới mỗi ngày biểu thị các sự kiện đã lên lịch.

xem theo ngày

Chọn một ngày trong tuần rồi bấm **VIEW** để xem các sự kiện ngày hôm đó. Bạn có thể lưu, chỉnh sửa, xem, sao chép và xóa bất kỳ sự kiện nào.

xem theo sự kiện

Chọn một sự kiện trong ngày rồi bấm **VIEW** để mở chi tiết sự kiện.Bạn có thể, chỉnh sửa, sao chép và xóa các sự kiện trong hộp sự kiện.

thêm sự kiện mới

Bạn có thể thêm vào sự kiện mới bằng hai cách.

Tìm chức năng: Bấm ☰ **> More > Datebook** > Bấm ☰ > **Day view > [New Entry]**

hoặc

Bấm ☰ **> Datebook** > *ngày* > ☰ > **New > Event**

Để cài đặt chi tiết sự kiện **Event**, thực hiện các bước sau. Mỗi sự kiện cần phải có tên. Các thông tin khác thì không bắt buộc.

1. Bấm **CHANGE** để chọn **Title.**
2. Nhập tên sự kiện bằng bàn phím.
3. Bấm **OK** để lưu tên sự kiện.
4. Bấm ·◌· lên hoặc xuống để duyệt qua các mục khác và nhập các thông tin cần thiết.

   Các mục khác giúp bạn nhập thông tin về **Start**, **Duration**, **Date**, **Repeat**, và **Alarm.**
5. Bấm **DONE** để lưu sự kiện mới.

thêm công việc mới

Bạn có thể thêm một công việc mới trong lịch trình như sau:

Tìm chức năng: Bấm ☰ **> More > Datebook >** ☰ **>New > Task**

Để cài đặt chi tiết công việc **Task**, thực hiện các bước sau. Mỗi công việc cần phải có tên. Các thông tin khác thì không bắt buộc.

1. Chọn **Summary** rồi bấm **CHANGE.**
2. Nhập tên của công việc bằng bàn phím.
3. Bấm **OK** để tên lại.
4. Bấm ·◌· lên hoặc xuống để di chuyển đến và nhập các thông tin cần thiết.

   Bạn có thể nhập thông tin vào các mục **Start Date**, **Deadline**, **Priority**, **Completed**, **Category** và **Status.**
5. Bấm **DONE** để lưu công việc mới lại và quay về màn hình xem theo ngày.

thay đổi sự kiện/công việc

Để thay đổi nội dung của một sự kiện / công việc đang có trong máy điện thoại:

Tìm chức năng: Bấm ☰ **> More > Datebook**

1. Bấm ·◌· sang trái hoặc phải để chọn ngày có sự kiện/công việc muốn thay đổi.
2. Bấm ☰ **> Day view** để hiển thị ngày cần xem.
3. Bấm ·◌· lên hoặc xuống để chọn sự kiện/công việc muốn thay đổi.
4. Bấm **VIEW** để hiển thị sự kiện/công việc.

5 Bấm **EDIT** để chỉnh sửa sự kiện/công việc.

6 Bấm ·◌· lên hoặc xuống để chọn chi tiết cần thay đổi.

7 Bấm **CHANGE** để thay đổi thông tin.

8 Nhập nội dung mới bằng bàn phím.

9 Bấm **DONE** để lưu thông tin vừa nhập lại.

chép sự kiện/công việc

Sao chép thông tin từ một sự kiện/công việc hiện hành sang một sự kiện/công việc mới:

Tìm chức năng: Bấm ☰ > **More** > **Datebook**

1 Bấm ·◌· sang trái hoặc phải để tìm ngày có sự kiện/công việc đã định.

2 Bấm ☰ > **Day View** để hiển thị lịch theo ngày.

3 Bấm ·◌· lên hoặc xuống để tìm sự kiện/công việc cần sao chép.

4 Bấm ☰ để mở **Datebook Menu**.

5 Bấm ·◌· lên xuống để chọn lệnh **Copy**.

6 Bấm **SELECT** để thực hiện lệnh.

7 Bấm **YES** để xác nhận lệnh.

Máy điện thoại hiển thị màn hình **Date** để bạn chế độ đổi ngày dễ dàng.

8 Nhập thông tin về ngày của sự kiện bằng bàn phím.

9 Bấm ·◌· trái hoặc phải để chọn ngày, tháng, năm.

10 Bấm **OK** để thực hiện sao chép.

11 Bấm ·◌· lên hoặc xuống để chọn chi tiết sự kiện/công việc và sửa đổi thông tin cần thiết.

12 Bấm **DONE** để lưu sự kiện/công việc mới.

xóa sự kiện

Tìm chức năng: Bấm ☰ **> More > Datebook**

1. Bấm ·◌· sang trái hoặc phải để tìm ngày có sự kiện muốn xóa.
2. Bấm ☰ **> Day View** để xem theo ngày.
3. Bấm ·◌· lên hoặc xuống để tìm sự kiện cần xóa.
4. Bấm ☰ để mở **Datebook Menu.**
5. Bấm ·◌· lên hoặc xuống để chọn lệnh **Delete.**
6. Bấm **SELECT** để xóa sự kiện.

   Đối với các sự kiện không lặp lại, máy điện thoại sẽ yêu cầu bạn xác nhận việc xóa. Chọn **Yes** hoặc **No** để đồng ý hoặc bỏ việc xóa. Đối với các sự kiện lặp đi lặp lại, máy điện thoại hiển thị danh sách các chọn lựa:

   Bấm ·◌· lên hoặc xuống để chọn **This Event Only** hoặc **Repeat Events**. Bấm **SELECT** để thực hiện việc xóa.

xóa công việc

Tìm chức năng: Bấm ☰ > More > Datebook

1. Bấm·◌· sang trái hoặc phải để xem ngày có công việc muốn xóa.
2. Bấm ☰ **> Day View** để xem lịch theo ngày.
3. Bấm·◌· lên hoặc xuống để tìm công việc cần xóa.
4. Bấm ☰ để mở **Datebook Menu.**
5. Bấm ·◌· lên hoặc xuống để chọn lệnh **Delete.**
6. Bấm **SELECT** để thực hiện việc xóa.
7. Máy điện thoại sẽ yêu cầu bạn xác nhận. Chọn **Yes** hoặc **No** để xóa hoặc bỏ việc xóa công việc.

đọc tin nhắn với iMelody

Tìm chức năng: Bấm ☰ > **Messages** > **Text Msgs**

Để mở tin nhắn:

1. Bấm ·◌· để di chuyển đến tin nhắn.
2. Bấm **READ** để mở tin nhắn.

   Máy điện thoại sẽ hỏi **Play Ring Tone?**
3. Bấm **YES** để mở iMelody. (iMelody chỉ chơi được khi định dạng đúng. Nếu không máy sẽ có thông báo.) Bấm **NO** để ngưng việc chơi nhạc.

iMelody tải được bằng EMS

Tiếng chuông iMelody có thể tải được về bằng tin nhắn EMS và chế độ làm tiếng chuông báo.

Bạn có thể tải về tối đa 20 tiếng chuông iMelody.

Ghi chú: Đây là tính năng phụ thuộc vào mạng di động và sự đăng ký sử dụng dịch vụ. Không dùng được ở tất cả mọi nơi. Có thể phải trả thêm cước phí kết nối, cước dữ liệu và/hoặc các loại cước phí khác.

lưu iMelody

1. Bấm **STORE** và tên file sẽ hiển thị trên màn hình.
2. Bấm **OK** để lưu iMelody vào mục **My Tones.**

Ghi chú: Có thể không lưu được iMelody vì hai lý do: tên file bị trùng hoặc bộ nhớ bị đầy. Nếu tên file bị trùng, thay đổi tên file ở trong mục **Tone Details.** Nếu bộ nhớ bị đầy, hãy thay đổi nhạc chuông cũ bằng nhạc chuông mới.

đài FM

Lắp thêm tai nghe để đổi mục **MYMENU** thành **RADIO** ở màn hình chính. Bấm **RADIO** để mở đài FM. Bấm thêm một lần nữa để tắt.

Khi đã mở đài, bấm ·◌· sang trái hoặc phải để điều chỉnh tần số. Bấm ·◌· lên hoặc xuống để điều chỉnh âm lượng. Bấm **SPKR ON** để nghe đài FM bằng loa ngoài. Bấm **SPKR OFF** để nghe đài bằng tai nghe.

cài đặt các tần số

Bạn có thể lưu lại tối đa 9 tần số đài FM trong máy điện thoại.

1. Bấm ·◌· sang trái hoặc phải để dò đài.
2. Bấm và giữ phím số để lưu lại tần số đó vào máy điện thoại.

nghe các tần số đã cài đặt

Bấm phím số tương ứng với tần số đã cài đặt để nghe tần số đó.

Ghi chú: Bạn nên dùng tai nghe chính hiệu của Motorola để nghe đài FM được tốt nhất.

Ghi chú: Các phụ kiện chính hiệu có ở một số nước. Vui lòng liên hệ với các đại lý để biết thêm chi tiết.

loa

Bạn có thể mở loa ngoài trong suốt cuộc gọi bằng cách bấm **SPKR ON** hoặc tắt loa bằng cách bấm **SPKR OFF**.

tìm kiếm trong danh bạ

Có hai cách tìm kiếm trong danh bạ, bằng lệnh **Find** và lệnh **Jump.**

Để chọn cách tìm:

Tìm chức năng: Bấm ☰ > **Phonebook** > ☰ > **Search by** > **Find** hoặc **Jump**

tìm bằng lệnh jump

Bấm phím số 1 hay nhiều lần để nhảy đến các mục từ có tên bắt đầu bằng ký tự vừa nhập. Bấm phím tiếp theo để nhảy đến mục từ có tên bắt đầu bằng 2 ký tự vừa nhập. Bạn có thể nhập tối đa 3 ký tự để tìm kiếm.

tìm bằng lệnh find

Khi bạn nhập ký tự tìm kiếm đầu tiên, sẽ có màn hình hiển thị yêu cầu bạn nhập tên cần tìm.

Bạn có thể nhập các ký tự đầu tiên của tên cần tìm rồi bấm **OK**, danh bạ sẽ hiển thị các mục từ gần đúng với yêu cầu tìm kiếm nhất.

các chức năng chính

Xem trang 1 về sơ đồ thông tin các phím chức năng cơ bản.

màn hình

Màn hình ở *chế độ chờ* là màn hình hiển thị khi bạn mở máy điện thoại. Để gọi điện thoại khi ở màn hình này, nhập số điện thoại bằng bàn phím rồi bấm ⏻.

Ghi chú: Màn hình chờ thực tế trên máy có thể khác với hình minh họa, tùy theo tưng nhà cung cấp dịch vụ.

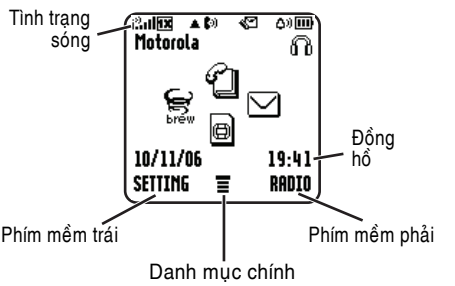

Tên của phím mềm cho biết chức năng hiện tại của phím. Xem trang 1 về vị trí các phím mềm.

các biểu tượng

Các biểu tượng được hiển thị ở phần trên của màn hình chờ:

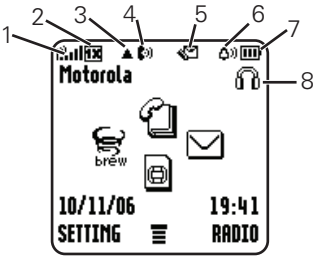

1 **Cường độ sóng** - Cho biết cường độ sóng của mạng di động.

2 **Biểu tượng 1X** - cho biết máy đang hoạt động ở chế độ 1X.

3 **Chuyển vùng** - Cho biết bạn đang sử dụng mạng khác với mạng đăng ký. Biểu tượng kiểu nhập ký tự, nhập số hoặc biểu tượng cũng xuất hiện ở vị trí này.

4 **Đang sử dụng** - Biểu tượng này xuất hiện khi đang có cuộc gọi hoặc khi bạn có một kết nối an toàn cũng như không an toàn.

5 **Tin nhắn** - Biểu tượng xuất hiện khi bạn có tin nhắn hay thư thoại.

= tin văn bản/ thư thoại = tin nhắn đầy

Ghi chú: Khi ký hiệu báo tin nhắn đầy xuất hiện, hộp tin nhận được đã bị đầy. Hãy xóa các tin cũ đi để máy điện thoại nhận được tin mới.

6 **Biểu tượng nhắc báo** - Cho biết loại nhắc báo đang sử dụng.

= Chuông to = Rung rồi Chuông

= Chuông nhỏ = Im lặng

= Rung

7 **Dung lượng pin** - Cho biết dung lượng pin còn lại. Có càng nhiều thanh ngang, pin càng đầy năng lượng.

8 **Đài Radio** - Cho chức năng nghe đài radio đang được mở.

biểu tượng trạng thái

Các biểu tượng trạng thái cho biết có cuộc gọi tới, tin nhắn mới hoặc tình trạng pin.

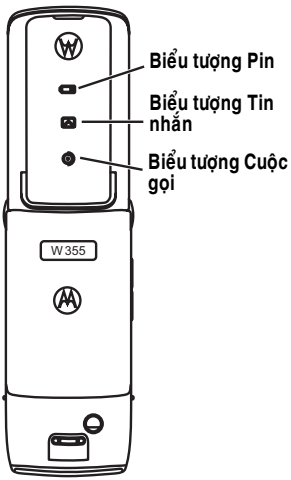

biểu tượng / nhắc báo
biểu tượng cuộc gọi Biểu tượng nhấp nháy nhanh màu xanh lục cho biết cuộc gọi tới của số điện thoại quen biết, nhấp nháy chậm màu xanh lục cho biết có cuộc gọi bị nhỡ từ số điện thoại quen biết. Biểu tượng nhấp nháy nhanh màu cam cho biết cuộc gọi tới của số điện thoại không quen biết, nhấp nháy chậm màu cam cho biết có cuộc gọi bị nhỡ từ số điện thoại không quen biết.
biểu tượng tin nhắn Biểu tượng nhấp nháy màu xanh dương khi có tin nhắn hoặc lời nhắn mới.
biểu tượng pin Biểu tượng nhấp nháy màu cam khi pin yếu và được mở sáng khi đang sạc pin.

danh mục

Ở màn hình chờ, bấm ☰ để mở danh mục chính và di chuyển trong danh sách các chức năng.

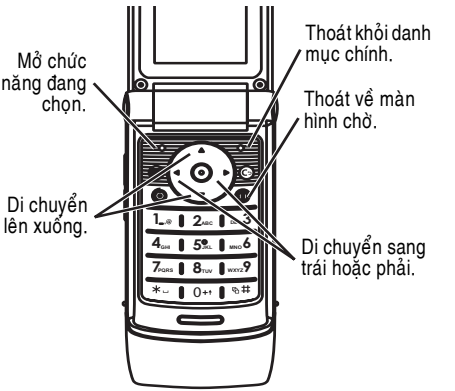

Các biểu tượng có thể có trong máy điện thoại, tùy theo việc đăng ký sử dụng dịch vụ và nhà cung cấp dịch vụ.

các tính năng chính	
Messages	UTK *
Phonebook	Brew *
Recent Calls	Datebook *
Games	Settings
MyMenu	More

* Đây là tính năng phụ thuộc vào mạng di động và sự đăng ký sử dụng dịch vụ. Không dùng được ở tất cả mọi nơi. Có thể phải trả thêm cước phí kết nối, cước dữ liệu và/hoặc các loại cước phí khác.

chọn chức năng

Có một số chức năng cần bạn chọn giá trị có trong danh sách:

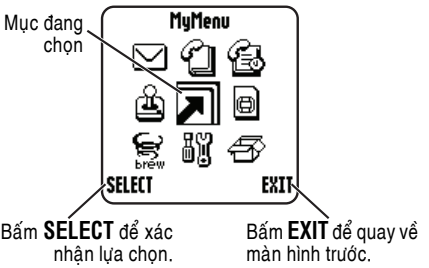

Bấm ·ọ· lên hoặc xuống để di chuyển đến mục mà bạn cần.

nhập liệu

Có nhiều chức năng yêu cầu bạn phải nhập liệu vào.

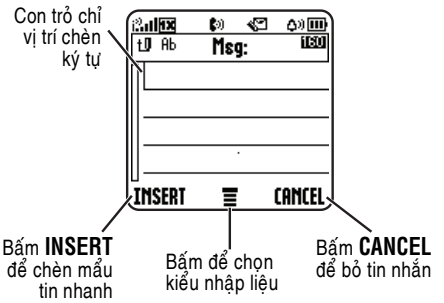
Con trỏ chỉ vị trí chèn ký tự
Msg:
INSERT
CANCEL
Bấm **INSERT** để chèn mẫu tin nhanh
Bấm để chọn kiểu nhập liệu
Bấm **CANCEL** để bỏ tin nhắn

kiểu nhập văn bản

Bấm ☰ khi đang nhập văn bản để chọn kiểu nhập:

kiểu nhập	
TAP	Kiểu nhập bao gồm: • Tap tiếng Anh • Tap Bahasa Indonesia • Tap Extended
iTAP ™	Kiểu nhập bao gồm: • iTAP tiếng Anh
Numeric	Kiểu nhập **Numeric** (12) chỉ cho phép nhập số
Symbol	Kiểu nhập **Symbol** (@) chỉ cho phép nhập biểu tượng.

kiểu nhập liệu iTAP™

Bấm ☰ khi đang nhập liệu để chọn kiểu nhập liệu **iTAP**. Kiểu nhập liệu **iTAP** giúp bạn nhập từ bằng cách bấm một phím cho mỗi ký tự. Khi đã chọn **iTAP**, biểu tượng iTAP được hiển thị trên màn hình chờ. Phần mềm **iTAP** kết hợp các ký tự mà bạn nhập vào để đoán từ mỗi khi bạn bấm phím.

Ví dụ, nếu bạn bấm 2 7 7 5, máy sẽ hiển thị một danh sách các nhóm từ như **appl, aspj, aspk.**

Khi bạn nhập từ 3 ký tự liên tiếp trở lên, máy sẽ đoán các ký tự còn lại của từ.

Ví dụ, nếu bạn nhập **appl**, máy sẽ hiển thị:

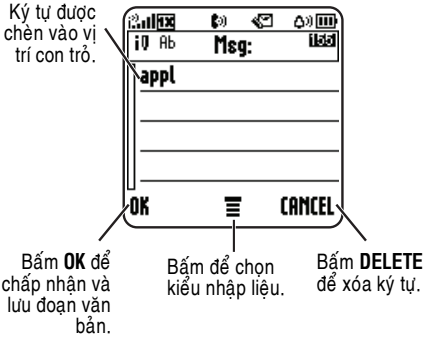
Ký tự được chèn vào vị trí con trỏ.
iTAP Ab
Msg:
appl
OK
CANCEL
Bấm OK để chấp nhận và lưu đoạn văn bản.
Bấm để chọn kiểu nhập liệu.
Bấm DELETE để xóa ký tự.

kiểu nhập liệu Tap

Bấm ☰ khi đang nhập liệu để chọn kiểu nhập liệu **Tap**. Để nhập văn bản, bấm phím số nhiều lần để chọn ký tự và số tương ứng với phím đó. Tiếp tục lặp lại để nhập các ký tự khác.

nhập số

Bấm phím số để nhập số.

nhập biểu tượng

Bấm phím số để xem các biểu tượng tương ứng được hiển thị ở dưới màn hình.

Di chuyển đến biểu tượng muốn sử dụng và bấm **SELECT**.

âm lượng

Khi nói chuyện điện thoại, có 3 chế độ âm lượng để bạn chọn là **Normal, Earpiece** và **Speaker On**. Trong nói chuyện, bạn có thể điều chỉnh âm lượng tai nghe bằng cách bấm ·ọ· sang phải để tăng và sang trái để giảm hoặc bằng cách bấm phím điều chỉnh lên/xuống ở bên cạnh máy.

Hơn nữa bạn có thể bấm ·ọ· rồi chọn **MUTE** để câm tiếng cuộc gọi.

Khi cuộc gọi kết thúc, bất kể bạn đang chọn chế độ nào (**Normal**, **Earpiece** hoặc **Speaker On**), âm lượng sẽ giữ nguyên ở mức độ vừa cài đặt.

phím di chuyển

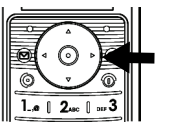

Bấm phím ·ọ· di chuyển lên hoặc xuống trong các danh mục, thay đổi cài đặt của các tính năng, và chơi game. Bấm **SELECT** để mở danh mục đang chọn.

mã khóa và mật mã

Để thay đổi mã khóa hoặc mật mã gồm 4 chữ số:

Tìm chức năng: Bấm ☰ > **Settings > Security > New Passwords**

Hướng dẫn: Để thay đổi mật khẩu, bạn phải xác nhận mật khẩu bằng cách nhập hai lần.

hạn chế các cuộc gọi

Bạn có thể cài đặt Hạn chế cuộc gọi là **Allow All, Allow Phonebook** và **Alllow None** khi đang có cuộc gọi đến hoặc đi.

Bạn cần phải nhập mật khẩu (1234) khi muốn thay đổi.

chế độ lịch sự

Trong nhiều tình huống tiếng chuông điện thoại hoặc tiếng bấm bàn phím có thể bị xem là bất lịch sự, như trong rạp chiếu phim, bảo tàng, sân khấu, ... Máy điện thoại có thể được cài đặt ở chế độ lịch sự. Mọi nhắc báo về cuộc gọi tới đều được chuyển sang chế độ rung không nghe thấy. Bấm và giữ phím * để chọn **Loud Ring** hoặc **Vibrator**.

cài đặt máy điện thoại

kiểu chuông

Máy điện thoại đổ chuông hoặc rung báo cho bạn có cuộc gọi tới hoặc sự kiện khác. Có năm kiểu chuông: **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibe then Ring**, và **Silent.**

chuông riêng

Để chọn **My Tones:**

Tìm chức năng: Bấm ☰ > **Settings** > **Ring Styles** > **My Tones**

Để chọn kiểu chuông:

Tìm chức năng: Bấm ☰ > **Settings** > **Ring Styles** > **Alerts**

Để mở/tắt **Minute Alerts:**

Tìm chức năng: Bấm ☰ > **Settings** > **Ring Styles** > **Other Alerts** > **Minute Alerts**

Để điều chỉnh âm lượng theo các kiểu báo khác nhau:

Tìm chức năng: Bấm ☰ > **Settings** > **Ring Styles** > **Loud Ring/Soft Ring/Vibrate/ Vibe then Ring/Silent Detail** > **Ring Volume, In Call, Message Tone, Alarms, Voicemail, Key Volume, Earpiece Vol.**

Máy điện thoại này có 20 kiểu chuông đa âm đã được cài sẵn.

ngày & giờ

Để cài đặt ngày và giờ cho máy điện thoại:

Tìm chức năng: Bấm ☰ > **Settings** > **Initial Setup** > **Time and Date**

hoạt hình

Máy điện thoại hiển thị hoạt hình khi mở máy.

hình nền

Để cài hình nền cho máy điện thoại:

Tìm chức năng: Bấm ☰ > **Settings** > **Personalize** > **Wallpaper**

Máy điện thoại có nhiều hình nền cho bạn chọn, gồm có **None**, **East**, **Identity**, **Relax**, **Sky**, và **Lovely**.

bảo vệ màn hình

Để cài đặt chế độ bảo vệ màn hình cho máy điện thoại:

Tìm chức năng: Bấm ☰ > **Settings** > **Personalize** > **Screen Saver** > **Picture**

Máy điện thoại này có sẵn một số chế độ bảo vệ màn hình (**None**, **Coastal**, **Drift**, **Dream**, **Quirky**, **Amuse**). Để cài đặt thời gian chờ trước khi máy hiển thị hoạt hình:

Tìm chức năng: Bấm ☰ > **Settings** > **Personalize** > **Screen Saver** > **Delay**

chọn kiểu trả lời

Bạn có nhiều cách để trả lời cuộc gọi đến. Để mở hoặc tắt một cách trả lời cuộc gọi đến:

Tìm chức năng: Bấm ☰ > **Settings** > **In-call Setup** > **Answer Option**

mục chọn	
Any Key	Trả lời bằng cách bấm phím bất kỳ.
Send Key Only	Trả lời bằng cách bấm phím ✆.
Open to Answer	Trả lời bằng cách bấm mở nắp máy.

tính năng về cuộc gọi

Chương này mô tả các tính năng có liên quan đến việc gọi và trả lời cuộc gọi.

các cuộc gọi vừa qua

Máy điện thoại lưu lại danh sách các cuộc gọi đi và đến, cả các cuộc gọi không kết nối được. Các cuộc gọi gần nhất được hiển thị ở đầu danh sách. Cuộc gọi cũ nhất sẽ bị xóa đi khi có cuộc gọi mới được thêm vào.

Tìm chức năng: Bấm ☰ > **Recent Calls** > danh sách cuộc gọi muốn dùng

1 Di chuyển đến **Missed Calls** - Cuộc gọi nhỡ, **Received Calls** - Cuộc gọi đã nhận, hay **Dialed Calls** - Các cuộc đã gọi, rồi bấm **SELECT.**

2 Di chuyển đến một cuộc gọi. Biểu tượng bên cạnh cuộc gọi cho biết cuộc gọi đã được kết nối.

- Để gọi cho số điện thoại vừa chọn, bấm ⊙.
- Để xem chi tiết cuộc gọi (như ngày giờ), bấm **VIEW.**

gọi lại cho một số điện thoại

1 Bấm ⊙ khi máy đang ở chế độ chờ để mở danh sách **Dialed Calls**. Hoặc bấm ☰ > **Recent Calls** > **Dialed Calls**, **Missed Calls** và **Received Calls.**

2 Di chuyển đến số điện thoại muốn gọi rồi bấm ⊙.

quay số nhanh

Bạn có thể gọi nhanh cho số điện thoại đang lưu trong danh bạ **Phonebook** bằng cách bấm mã số quay nhanh.

Nhập số vị trí trong danh bạ của số điện thoại cần gọi rồi bấm #. Máy điện thoại sẽ tự động hiển thị số điện thoại đó. Bấm để gọi.

trả lời cuộc gọi

Máy điện thoại lưu thông tin về các cuộc gọi không được trả lời và hiển thị thông báo **Missed Calls.**

1. Bấm **VIEW** để xem danh sách các cuộc gọi bị nhỡ **Missed Calls.**
2. Di chuyển đến cuộc gọi muốn trả lời, rồi bấm .

câm tiếng cuộc gọi

Khi đang có cuộc gọi điện thoại, bấm > **Mute.**

Đối với cuộc gọi đến, bấm bên trái để câm tiếng chuông / cuộc gọi.

số của người gọi

Chức năng *Calling line identification - Caller ID* hiển thị số điện thoại gọi đến trên màn hình của máy điện thoại.

Máy điện thoại hiển thị tên của người gọi đến nếu trong danh bạ **Phonebook** có thông tin về người đó hoặc câu **Incoming Call** nếu không có thông tin này.

Bạn có thể cài các nhạc chuông khác nhau để nhận biết từng người gọi đến.

gọi khẩn cấp

Nhà cung cấp dịch vụ đã cài đặt một hoặc nhiều số gọi khẩn cấp (như là 112 hoặc 911) để bạn gọi bất cứ lúc nào nếu cần, ngay cả khi không có thẻ RUIM. Bạn có thể gọi điện thoại khẩn cấp ngay cả khi máy điện thoại bị khóa hoặc khi bạn được yêu cầu nhập mật mã.

Ghi chú: Số gọi khẩn cấp khác nhau tùy theo mỗi nước. Số khẩn cấp cài sẵn trong máy điện thoại của bạn có thể không dùng được ở mọi chỗ, và có khi cuộc gọi khẩn không thể thực hiện do lỗi mạng, môi trường hay các ảnh hưởng bên ngoài. Vui lòng liên hệ với nhà cung cấp dịch vụ để biết thêm chi tiết.

Để gọi số khẩn cấp bất kỳ lúc nào:

1 Bấm các phím số nhập số điện thoại khẩn cấp vào.

2 Bấm [OK] để gọi cho số điện thoại đó.

gọi quốc tế

Nếu bạn có đăng ký sử dụng dịch vụ điện thoại quốc tế, bấm và giữ phím [0] để nhập vào mã truy cập quốc tế (**+**). Tiếp tục bấm mã nước, mã vùng và số điện thoại.

thư thoại

Bạn có thể nghe các lời nhắn bằng cách gọi đến số điện thoại của hộp thư thoại. Các lời nhắn được lưu ở tổng đài chứ không lưu trong máy của bạn. Vui lòng liên hệ với nhà cung cấp dịch vụ để biết thêm chi tiết.

Khi bạn nhận được một lời nhắn, máy điện thoại hiển thị biểu tượng thông báo có lời nhắn mới (một số mạng di động

hiển thị biểu tượng này khi bạn có lời nhắn, bất kể mới hay cũ). Nếu bạn xóa hết lời nhắn, biểu tượng sẽ biến mất.

Để nghe lời nhắn của bạn:

Tìm chức năng: Bấm ☰ > **Messages** > **Voicemail**

Máy điện thoại sẽ gọi cho số điện thoại của hộp thư thoại.

các ký tự đặc biệt

Ngoài việc bấm các số trên bàn phím, bạn có thể chèn thêm các ký tự đặc biệt trong một số điện thoại.

Khi đang bấm số (có số hiển thị trên màn hình), bạn có thể bấm * hai lần để nhập ký tự điều khiển **p**, ba lần để nhập ký tự **w**.

mục chọn	
Tạm ngưng **(p)**	Máy sẽ chờ đến khi cuộc gọi được kết nối, rồi mới quay các số tiếp theo.
Chờ **(w)**	Máy sẽ chờ cho đến khi cuộc gọi được kết nối rồi yêu cầu bạn xác nhận để quay các số tiếp theo.

các tính năng khác

danh bạ

tính năng	
thêm liên hệ mới	Để thêm mục từ vào danh bạ: **M > Phonebook > M > New** Chọn ví trí, nhập chi tiết cho mục từ rồi bấm **DONE**.
xem danh sách các liên hệ	Để xem danh sách các liên hệ trong danh bạ: **M > Phonebook** **Phím tắt:** Ở màn hình chờ, bấm ·ọ· lên hoặc xuống để xem danh bạ.
tìm theo tên	Để tìm theo tên: **M > Phonebook** **Hướng dẫn:** Nhập ký tự đầu tiên của tên để xem các tên tương ứng. Xem cách tìm tên ở trang 28.
xóa liên hệ	Xóa một liên hệ trong danh bạ: **M > Phonebook** > *chọn tên* > **M > Delete**
xóa tất cả liên hệ	Xóa toàn bộ danh bạ: **M > Phonebook > M > Delete All**

tính năng	
đính kèm số điện thoại	Để đính kèm một số điện thoại vào một mục từ: **M > Phonebook > *chọn tên* > M > Attach Number**
xem dung lượng bộ nhớ	Để xem dung lượng bộ nhớ còn trống: **M > Phonebook > M > Phone Capacity**

các cuộc gọi gần đây

tính năng	
xem danh sách các cuộc gọi	Xem danh sách các cuộc gọi đến, gọi đi và cuộc gọi bị nhỡ: **M > Recent Calls** Bạn có thể xem được các thông tin liên quan đến cuộc gọi như là số điện thoại, ngày giờ, và độ dài cuộc gọi.
xóa danh sách các cuộc gọi	Để xóa danh sách các cuộc gọi bị nhỡ, cuộc gọi đi, cuộc gọi đến: **M > Recent Calls > *danh sách cuộc gọi* > M > Delete All > YES**

tính năng	
xem thời gian gọi	Để xem độ dài của cuộc gọi gần đây nhất, các cuộc đã gọi, đã nhận và tất cả cuộc gọi: **M > Recent Calls > Call Timer**

tin nhắn

tính năng	
xem tin nhắn cũ	**M > Messages > Text Msgs**
xóa tin nhắn	**M > Messages >** *nơi lưu* **>** *tin nhắn* **> M > Delete**
gọi cho người gởi tin nhắn	**M > Messages >** *nơi lưu* **>** *tin nhắn* **> M > Call Back**
tạo tin nhắn mới	**M > Messages > Create Messages**
sửa đổi tin nhắn cũ	**M > Messages >** *nơi lưu* **>** *tin nhắn* **> M > Forward**
nghe lời nhắn	**M > Messages > Voicemail** Khi bạn có lời nhắn mới, máy điện thoại hiển thị biểu tượng ✉. Đôi khi biểu tượng ✉ không xuất hiện ngay cả khi bạn kiểm tra tin nhắn. Nó phụ thuộc vào cài đặt hệ thống của nhà cung cấp dịch vụ.
cài đặt nhắc báo có tin nhắn	Để cài nhắc báo có tin nhắn: **M > Messages > M > Text Msg Setup > SMS Alert**

tính năng	
cài đặt hộp thư thoại	Để cài đặt số điện thoại của hộp thư thoại trước khi bạn nghe lời nhắn: **M > Messages > M > Voicemail Setup**
xem bộ nhớ còn trống để lưu tin nhắn	Xem bộ nhớ còn trống: **M > Messages > M > Memory Meter**

tính năng	
xóa tin nhắn	Để tự xóa tin nhắn: **M > Messages > M > Cleanup Now** Chọn thư mục muốn xóa tin nhắn. Để máy điện thoại tự động xóa tin nhắn cũ: **M > Messages > M > Auto Delete Inbox** hoặc **Auto Delete Outbox**
tự động gọi lại	Để cài đặt tính năng tự động gọi lại: **M > Messages > M > Auto Retry > Enable** hoặc **Disable**

tính năng	
cài đặt hiển thị nhắc gọi lại	Để cài đặt chế độ này: **M > Messages > M > Call Back Display**
gửi thông tin Ack	Để cài đặt **Delivery Ack**: **M > Messages > M > Delivery Ack > Enable** hoặc **Disable**

cài đặt

tính năng	
cài đặt số điện thoại của bạn	Để cài đặt số điện thoại của bạn **My Tel. Numbers**: **M > Settings > Phone Status > My Tel. Numbers** Hầu hết các máy hỗ trợ tối đa 2 số điện thoại. Để xem **My Tel. Numbers** khi đang có cuộc gọi, bấm ·ộ· để di chuyển đến thông tin muốn xem.

tính năng	
mã truy cập quốc tế	Để cài đặt mã số truy cập điện thoại quốc tế: **Menu > Settings > In-Call Setup > International Call** Bạn có thể chọn là **Automatic** hoặc **Manual**. Bạn cũng có thể tự cài mã số **Code**.
xem số ESN	**Menu > Settings > Phone Status > ESN**
xem dung lượng pin	**Menu > Settings > Phone Status > Battery Meter**
xem phiên bản phần mềm	**Menu > Settings > Phone Status > SW Version**
xem phiên bản PRL	**Menu > Settings > Phone Status > PRL Version**

tính năng	
cài đặt tự động gọi lại	**Menu > Settings > In-Call Setup > Auto Redial > Enable** hoặc **Disable**
cài đặt trò chuyện riêng	**Menu > Settings > In-Call Setup > Voice Privacy > Enable** hoặc **Disable**
chọn cách trả lời cuộc gọi	Để cài đặt cách trả lời cuộc gọi **Answer Option**: **Menu > Settings > In-Call Setup > Answer Option > Send Key Only**, **Any Key** hoặc **Open to Answer**
sắp xếp thứ tự danh mục	**Menu > Settings > Personalize > Main Menu**
định nghĩa phím mềm trái/phải	**Menu > Settings > Personalize > Home Screen > Home Keys** > *Phím mềm trái* hoặc *phải*

tính năng	
tạo câu chào	Để tạo câu chào: **Menu > Settings > Personalize > Greeting**
tạo biểu ngữ	Để tạo biểu ngữ ở màn hình chờ: **Menu > Settings > Personalize > Banner**
cài đặt màu	**Menu > Settings > Personalize > Color Setting** Cài đặt màu **Color Settings** gồm có **Pacific**, **Mandarin**, **Evergreen**, **Autumn**, **Dusk** và **Silver**.
ảnh của bạn	**Menu > Settings > Personalize > My Images**

tính năng	
hình nền	**Menu > Settings > Personalize > Wallpaper** Hình nền **Wallpaper** gồm có **None**, **East**, **Identity**, **Relax**, **Sky**, và **Lovely**.
thời gian đèn lantern chờ	**Menu > Settings > Initial Setup > Lantern Timeout** **Lantern Timeout** gồm có **30 sec**, **1 minute** và **2 minutes**.
cài đặt ngày giờ	**Menu > Settings > Initial Setup > Time and Date**
đèn nền	**Menu > Settings > Initial Setup > Backlight**
cài đặt kiểu cuộn danh mục	**Menu > Settings > Initial Setup > Scroll**

tính năng	
cài đặt hoạt hình khi mở máy	**Menu** > **Settings** > **Initial Setup** > **Animation**
chọn ngôn ngữ hiển thị	**Menu** > **Settings** > **Initial Setup** > **Language**
cài đặt DTMF	Để chọn độ dài DTMF: **Menu** > **Settings** > **Initial Setup** > **DTMF**
cài đặt dấu cách	**Menu** > **Settings** > **Initial Setup** > **Hyphenation**
xóa thông tin trong máy	Xóa các thông tin đã nhập vào máy: **Menu** > **Settings** > **Initial Setup** > **Master Clear**

tính năng	
khởi tạo lại máy điện thoại	Khởi tạo lại các giá trị mặc định trong máy: **Menu** > **Settings** > **Initial Setup** > **Master Reset**
cài đặt nhắc báo dịch vụ	**Menu** > **Settings** > **Network** > **Service Tone** > **On** hoặc **Off**
cài đặt nhắc báo kết thúc cuộc gọi	**Menu** > **Settings** > **Network** > **Call Drop Tone** > **On** hoặc **Off**
chọn băng tần	**Menu** > **Settings** > **Network** > **Band Selection**
cài đặt hiển thị mã vùng	Để cài đặt việc hiển thị mã vùng: **Menu** > **Settings** > **Network** > **Area Code** > **Show** hoặc **Hide**

tính năng	
cài đặt chế độ tự động trả lời	Để cài đặt chế độ tự động trả lời **Auto Answer** khi sử dụng tai nghe: **MENU > Settings > Headset > Auto Answer**

tính năng	
kiểu chuông báo	**MENU > Settings > Ring Styles** Các kiểu chuông báo có thể chọn được gồm có: Alert Profile (Kiểu chuông báo) **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibe then Ring**, và **Silent** Alert Details (Chi tiết kiểu chuông báo) **Ring Volume**, **In Call**, **Message Tone**, **Alarms**, **Voicemail**, **Key Volume**, **Earpiece Vol.** My Tones (tiếng chuông riêng)

tính năng	
	Other Alert (tiếng chuông khác) **Minute Alert** > **Enable** hoặc **Disable**
đổi mật mã	đổi mật mã gồm 4 chữ số: **Menu** > **Settings** > **Security** > **New Passwords** Mật mã được cài mặc định là 1234.
màn hình chờ	Thay đổi hình ảnh hiển thị trên màn hình chờ: **Menu** > **Settings** > **Personalize** > **Home Screen** Khi đó bạn có thể chọn điều chỉnh **Home Keys**, **Layout** và **Clock Set**.

tính năng	
danh mục chính	Để chọn hiển thị danh mục chính bằng biểu tượng hoặc ký tự và thứ tự các chức năng: **Menu** > **Settings** > **Personalize** > **Main Menu**
cài đặt bảo vệ màn hình	**Menu** > **Settings** > **Personalize** > **Screen Saver** > **Picture** hoặc **Delay**

các tính năng khác

tính năng	
máy tính	**Menu** > **More** > **Calculator**
đồng hồ bấm giờ	Để sử dụng đồng hồ bấm giờ **Stop Watch**: **Menu** > **More** > **Stop Watch**

tính năng	
đèn Lantern	Để cài đặt **Lantern**: ☰ **> More > Lantern**
sổ hẹn	Để sử dụng sổ hẹn **Datebook:** ☰ **> More > Datebook**
đồng hồ nhắc báo	Để cài đặt **Alarm Clock**: ☰ **> More > Alarm Clock**
cài đặt gọi dịch vụ	Để sử dụng **Service Dial**: ☰ **> More > Service Dial**

trò chơi

tính năng	
chơi trò chơi	Để chơi trò chơi: ☰ **> Games >** *trò chơi*

Độ hấp thu sóng điện từ - SAR

Kiểu điện thoại này phù hợp với các yêu cầu quốc tế về sự tiếp xúc với sóng vô tuyến.

Máy điện thoại của bạn là một thiết bị thu phát sóng vô tuyến. Nó được thiết kế và chế tạo nhằm không vượt quá giới hạn về sự tiếp xúc với năng lượng sóng điện từ theo các tiêu chuẩn quốc tế. Các tiêu chuẩn này được phát triển bởi tổ chức khoa học độc lập ICNIRP và có một mức độ an toàn dự phòng đủ để an toàn cho tất cả mọi người, bất kể tuổi tác và tình trạng sức khỏe.

Tiêu chuẩn tiếp xúc với năng lượng sóng điện từ dùng trong máy điện thoại di động được đo bởi một đơn vị tính gọi là SAR (Specific Absorption Rate). Kiểu máy điện thoại của bạn có giới hạn ICNIRP SAR là 2 W/kg và giá trị lớn nhất cho loại điện thoại này đo được ở tai là 0,84 W/kg[1]. Máy điện thoại này có nhiều chức năng khác nhau và được dùng ở nhiều vị trí khác nhau, như đeo trên người như mô tả trong hướng dẫn này[2]. Khi đó, giá trị SAR cao nhất đã đo được là 0,32 W/kg[1].

Mặc dù SAR được xác định khi máy hoạt động với công suất cao nhất, mức độ SAR thực tế thường thấp hơn nhiều giá trị tối đa. Đó là vì máy điện thoại được thiết kế để hoạt động ở nhiều công suất khác nhau nhưng thực tế nó chỉ dùng công suất cần thiết để kết nối với mạng di động.

Các giá trị SAR có khác nhau với nhiều loại điện thoại, khi đeo ở nhiều vị trí khác nhau nhưng tất cả đều phù hợp với các qui định của chính phủ về sự an toàn cho việc sự tiếp xúc với năng lượng sóng điện từ. Cần lưu ý rằng sự cải tiến về công nghệ điện thoại di động có thể làm cho các giá trị SAR ở mỗi loại máy khác nhau, nhưng chúng đều tuân thủ các qui định chung.

Tổ chức Y tế Thế giới đã tuyên bố rằng các thông tin khoa học không yêu cầu cần phải có bất kỳ một sự cẩn trọng đặc biệt nào khi sử dụng máy điện thoại di động. Họ chỉ ra rằng nếu bạn muốn giảm sự tiếp xúc với năng lượng sóng điện từ, bạn cần giới hạn thời gian nói chuyện điện thoại hoặc dùng thiết bị rảnh tay để giữ máy điện thoại ở xa đầu và cơ thể.

Các thông tin khác được nêu ở trang web của Tổ chức Y tế Thế giới (`http://www.who.int/emf`) hoặc của Motorola, Inc. (`http://www.motorola.com/rfhealth`).

1. Việc kiểm tra được thực hiện đúng theo tiêu chuẩn quốc tế về kiểm nghiệm. Tiêu chuẩn này đã bao gồm phần dự phòng đủ an toàn cho mọi người và bù trừ cho các sai lệch khi đo. Các thông tin khác có liên quan bao gồm phương pháp kiểm tra của Motorola, thủ tục kiểm tra và dung sai đo lường cho loại sản phẩm này.
2. Vui lòng xem thêm chương *An toàn và Thông tin chung*, mục đeo máy điện thoại.

Thông tin từ Tổ chức Y tế Thế giới - WHO

Các thông tin khoa học hiện tại không cho rằng phải có bất kỳ sự đề phòng nào về việc sử dụng máy điện thoại di động. Nếu bạn không an tâm, hãy giới hạn sự tiếp xúc với sóng điện từ cho bạn và cho trẻ em bằng cách giảm thời gian gọi điện thoại hoặc sử dụng các thiết bị rảnh tay để giữ máy điện thoại di động ở xa đầu và cơ thể.

Nguồn: WHO Fact Sheet 193

Xem thêm thông tin tại: `http://www.who.int./peh-emf`

Thông báo về FCC cho người sử dụng

FCC thông báo rằng Motorola không chấp thuận bất kỳ thay đổi hay điều chỉnh nào do người sử dụng thực hiện với chiếc máy điện thoại này. Mọi thay đổi hoặc điều chỉnh có thể làm người sử dụng mất quyền sử dụng máy. Xem điều 47 CFR Sec. 15.21.

Máy điện thoại này phù hợp với các yêu cầu của phần 15 trong qui định FCC Rules. Các hoạt động của máy phải thỏa mãn hai điều kiện: (1) Máy điện thoại không gây nhiễu điện từ có hại, và (2) máy điện thoại phải chịu được nhiễu điện từ, bao gồm cả các nhiễu có thể gây ra các hoạt động bất thường. Xem điều 47 CFR Sec. 15.19(3).

Nếu máy điện thoại của bạn hoặc các thiết bị phụ kiện có kết nối USB hoặc được xem là linh kiện máy tính do có khả năng kết nối với máy tính để truyền tải dữ liệu, máy sẽ được xem là thiết bị thuộc loại Class B và phải thỏa mãn các điều kiện sau đây:

Thiết bị này đã được kiểm nghiệm và kết luận phù hợp với các giới hạn của thiết bị điện tử thuộc loại Class B, theo như yêu cầu của phần 15 trong qui định FCC Rules. Các giới hạn này được thiết kế để giúp bảo vệ máy trước các nhiễu điện từ trong môi trường sử dụng dân dụng. Thiết bị này tạo ra, sử dụng và phát ra các sóng vô tuyến, nếu không được lắp đặt và sử dụng đúng cách, có thể gây nhiễu cho thông tin vô tuyến. Mặt khác, không có gì chắc chắn là nhiễu điện từ sẽ không xảy ra trong từng trường hợp cụ thể. Nếu thiết bị này gây nhiễu sóng điện từ tới đài radio hoặc máy vô tuyến truyền hình, có thể xác định bằng cách thử tắt và mở máy điện thoại, người sử dụng có thể hạn chế các nhiễu điện từ này bằng một trong các cách sau:

- Hướng hoặc bố trí lại ăng ten bắt sóng.
- Để các thiết bị cách xa nhau.
- Cắm các thiết bị vào các ổ điện khác nhau.
- Nhờ đại lý hoặc các kỹ thuật viên về radio/vô tuyến truyền hình giúp đỡ.

chỉ mục

A

ăng ten 7
an toàn 7

B

biểu ngữ 51
biểu tượng 11
biểu tượng trạng thái 30
bị hóc 12
bộ nhớ còn trống 46
bộ sạc 11

C

câu chào 51
cài đặt 49
cài đặt màu 51
cài đặt máy điện thoại 38
cài đặt ngày giờ 39
cài đặt tần số 27
các chức năng chính 29
các cuộc gọi đến 46
cách trả lời cuộc gọi 50
chế độ chờ 29
chép sự kiện 24
chọn chức năng 33
cổng cắm bộ sạc 1
cổng cắm tai nghe 1
công việc mới 23
cỡ chữ hiển thị 21
cuộc gọi bị nhỡ 46
cuộc gọi gần đây 46
cuộc gọi vừa qua 41

D

danh bạ 45
danh mục chính 54
danh sách cuộc gọi 46
DTMF 52
đài FM 27
độ dài cuộc gọi 47

đổi mật mã 54
đồng hồ bấm giờ 54

G

gọi khẩn cấp 43
gọi lại 41
gọi điện thoại 20

H

hình ảnh hiển thị 54
hình nền 51, 39
hoạt hình 39
hộp thư thoại 48

I

iMelody 26

K

khởi tạo lại 52
kiểu chuông 38
kiểu nhập liệu tap 35

L

lắp pin 17
loa 27
lời nhắn 47
lưu iMelody 26
lưu ý 10

M

mật mã 37
mã khóa 37
màn hình 29
máy hỏng 11
máy điều hoà tim 9
mở máy điện thoại 19

N

nhập biểu tượng 36
nhập kiểu itap 35
nhập số 36
nhắc báo tin nhắn 47
nhắc nhở 13
nhiễu sóng điện từ 8

P

phím di chuyển 1, 36
phím gọi 1
phím mềm phải 1
phím mềm trái 1
phím mở / tắt 1
phụ kiện chọn thêm 16

phụ thuộc vào mạng di động 16
pin 11, 17

S

sạc pin 18
số của người gọi 42
sổ hẹn 21
số điện thoại của bạn 49
số điện thoại của hộp thư thoại 44
sự kiện mới 22
sử dụng pin 11, 18
sử dụng và bảo quản 14
sóng điện từ 56
sóng vô tuyến 7

T

tắt máy điện thoại 19
tái chế 15
thêm mục từ 45
thẻ RUIM 17
thẻ RUIM bị khóa 19
thiết bị trợ thính 9
thiết bị y tế 9
thính lực 13
thông báo FCC 58
thư thoại 43
tìm kiếm 28
tìm theo tên 45
tin nhắn 47
tính năng cơ bản 16
tính năng khác 45, 54
tính năng nổi bật 21
tính năng về cuộc gọi 41
tổ chức y tế thế giới 57
tự động gọi lại 48
tự động trả lời 53
trả lời cuộc gọi 20
trò chơi 55

X

xem danh bạ 45
xem theo ngày 22
xem theo sự kiện 22
xem theo tuần 21
xóa công việc 25
xóa danh bạ 45
xóa sự kiện 25
xóa tin nhắn 48

www.hellomoto.com

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark office.
All other products or service names are the property of their respective owners.
The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license.
© Motorola, Inc. 2006

Specifications are subject to change without notice

Part No: SJJN7723A

Printed in Singapore

PPPP - 09/2006